








# **V-TONE BL-8808**

**Instrukcja obsługi / User Manual**

**Spis treści**

Bezpieczeństwo użytkowania .....	2
Konserwacja urządzenia .....	2
Budowa i obsługa urządzenia .....	3
Informacja o zużytych sprzęcie elektrycznym i elektronicznym .....	13

## Bezpieczeństwo użytkowania


	Przed użyciem prosimy o szczegółowe zapoznanie się z instrukcją obsługi. Prosimy również o zachowanie jej na przyszłość. Instrukcja zawiera zasady bezpiecznego korzystania z urządzenia.
	Po otrzymaniu produktu należy go rozpakować i sprawdzić, czy produkt jest kompletny i czy podczas transportu nie powstały żadne uszkodzenia. W przypadku uszkodzeń powstałych podczas transportu, prosimy nie używać produktu i niezwłocznie skontaktować się ze sprzedawcą lub producentem.
	<b>UWAGA! URZĄDZENIA NIE WOLNO WYRZUCAĆ DO ODPADÓW DOMOWYCH.</b> To oznaczenie oznacza, że produkt nie może być wyrzucany razem z odpadami domowymi w całej UE. W celu zapobiegnięcia potencjalnym szkodom dla środowiska lub zdrowia, zużyty produkt należy poddać recyklingowi. Zgodnie z obowiązującym prawem, nie nadający się do użycia sprzęt elektryczny i elektroniczny należy zbierać osobno, w specjalnie do tego celu wyznaczonych punktach zbierania zużytego sprzętu, celem ich przetworzenia i ponownego wykorzystania na podstawie obowiązujących norm ochrony środowiska.
	Produkt opisany w tej instrukcji jest zgodny z dyrektywami europejskimi, dlatego jest oznaczony znakiem CE.
	Urządzenie należy trzymać z dala od dzieci i niewykwalifikowanych osób. Producent nie ponosi odpowiedzialności za szkody spowodowane nieprawidłowym użytkowaniem.
	Przed użyciem upewnij się, że obudowa nie jest uszkodzona.
	Korzystać wyłącznie z dołączonego do produktu zasilacza dedykowanego DC 9-12V! Odłączenie produktu od zasilania odbywa się poprzez pociągnięcie za wtyczkę przewodu zasilającego – nie ciągnąć bezpośrednio za przewód zasilający! Odłącz urządzenie z zasilania przed zdjęciem obudowy lub konserwacją. W razie stwierdzenia uszkodzenia przewodu zasilającego – nie używaj go!
	Urządzenie do użytku wewnętrznego w dobrze wentylowanym pomieszczeniu, trzymać z dala od wilgoci. Nie należy narażać produktu na bezpośrednie działanie słońca. Nie wolno przechowywać i korzystać z urządzenia w pobliżu źródeł ognia!
	Nie wolno narażać urządzenia na pracę w wysokich temperaturach!
	W razie wystąpienia zakłóceń w pracy urządzenia, natychmiast odłącz je od źródła zasilania!

## Konserwacja urządzenia

1. Urządzenie może użytkować tylko wykwalifikowany personel, szkody spowodowane użytkowaniem niezgodnym z przeznaczeniem lub próbą samodzielnej naprawy nie podlegają gwarancji. Wewnątrz opakowania nie ma żadnych części serwisowych, naprawy mogą być wykonywane wyłącznie przez autoryzowany punkt serwisowy.
2. Nie pozwól, aby produkt wszedł w kontakt z olejem, tłuszczem lub jakimkolwiek podobnym płynem.
3. Regularne czyszczenie umożliwia długotrwałe użytkowanie oraz pozwala na zachowanie odpowiedniego funkcjonowania urządzenia. Do czyszczenia używaj miękkiej, suchej szmatki.

## Budowa i obsługa urządzenia

### Panel sterowania i gniazda

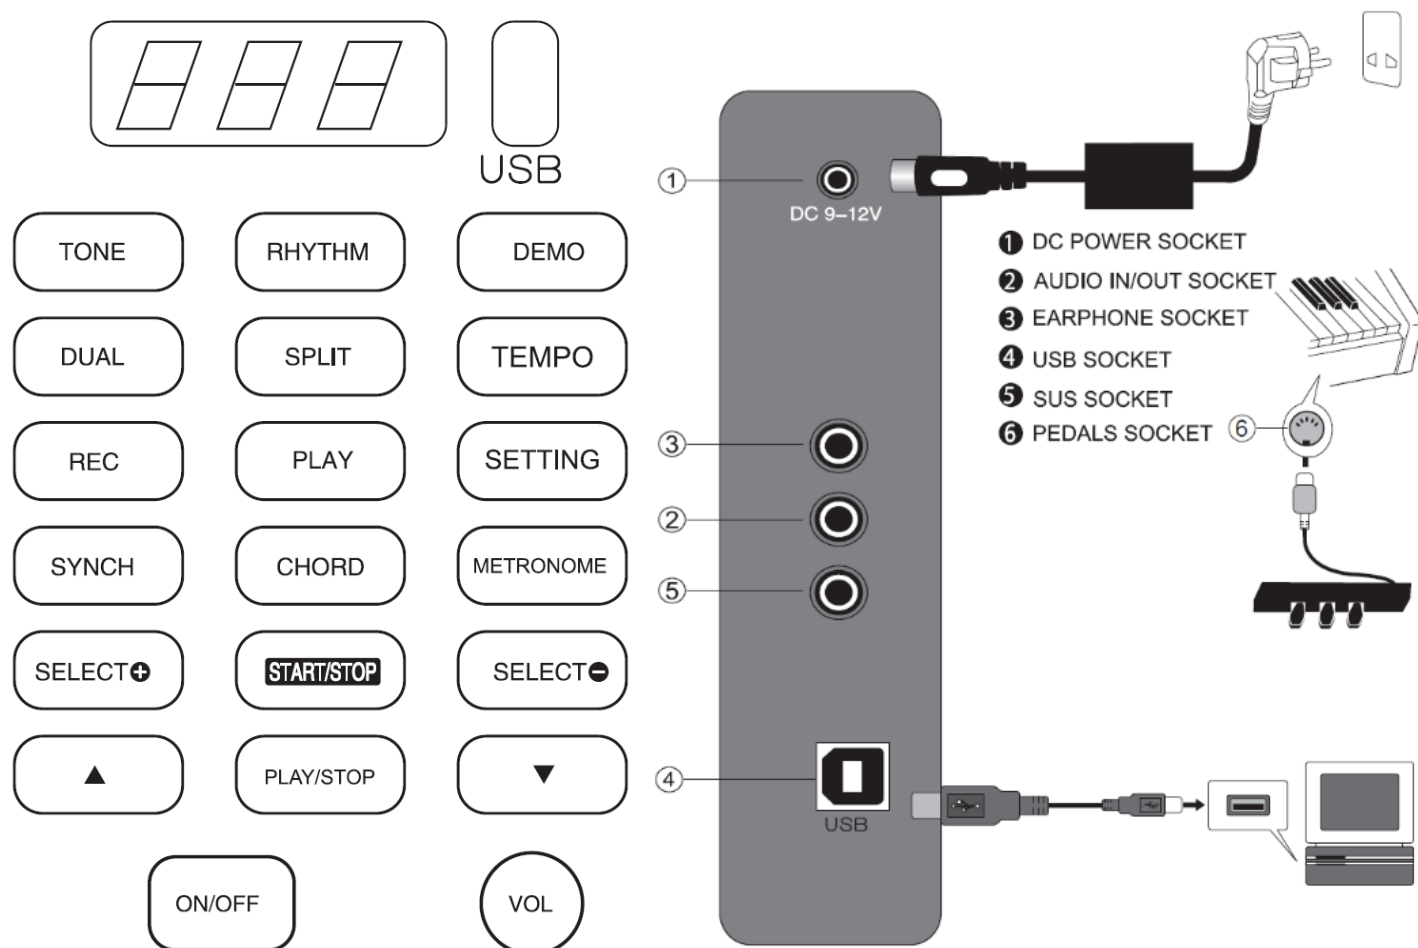

1. Gniazdo zasilania.
2. Gniazdo Audio In/Out.
3. Gniazdo słuchawkowe.
4. Gniazdo USB.
5. Gniazdo sustain.
6. Gniazdo MIDI.

### Przygotowanie urządzenia

- Urządzenie wymaga podłączenia do źródła zasilania za pomocą dedykowanego przewodu zasilającego. Przy podłączaniu urządzenia do źródła zasilania zachować zasady ostrożności.
- Należy użyć dedykowanego zasilacza. Okrągłą wtyczkę przewodu zasilacza należy podłączyć do portu zasilania, a następnie drugi koniec do gniazda zasilania. Napięcie wejściowe zasilacza powinno być zgodne z napięciem zasilania.
- Audio In/Out: po pierwsze, wyłączyć urządzenie i zewnętrzne urządzenia audio, po drugie, podłączyć wtyczkę przewodu audio do gniazda Audio In/Out, a następnie podłączyć drugi koniec do portu wejściowego zewnętrznego urządzenia audio.

- Podłączenie słuchawek: Po podłączeniu słuchawek do gniazda słuchawkowego, głośnik zostanie automatycznie wyłączony. Dzięki temu można grać bez przeszkadzania innym. Uwaga! Podczas korzystania z słuchawek nie należy zwiększać i utrzymywać przez dłuższy czas maksymalnej głośności – może to spowodować uszkodzenia lub/i utratę słuchu.

### Podstawowa obsługa

- Nacisnąć przycisk wł./wył. zasilania, wyświetlacz LED włączy się i pokaże wartość "001"; można rozpocząć grę na pianinie zgodnie z zasadami instrukcji.
- Regulacja głośności – użyć gałki VOL, aby zmniejszyć lub zwiększyć głośność.
- Wybór tonu – nacisnąć przycisk TONE, aby przejść do trybu wyboru tonu; między poszczególnymi tonami można wybierać za pomocą przycisków SELECT+ i SELECT-; domyślny ton to PIANO.
- Wybór podkładu rytmicznego – nacisnąć przycisk RHYTHM, aby przejść do trybu wyboru podkładu rytmicznego; między poszczególnymi podkładami rytmicznymi można wybierać za pomocą przycisków SELECT+ i SELECT-; nacisnąć przycisk START/STOP, aby rozpocząć odtwarzanie lub zatrzymać wybrany podkład rytmiczny.
- Regulacja tempa – nacisnąć TEMPO, aby ustawić tempo podkładu rytmicznego; tempo można zwiększyć za pomocą przycisku SELECT+ lub zmniejszyć za pomocą przycisku SELECT-; zakres tempa – 20-280.
- Akompaniament akordowy – wybrać podkład rytmiczny; w trybie wyboru podkładu rytmicznego, nacisnąć przycisk CHORD, aby przejść w tryb akompaniamentu akordowego; zagrać akompaniament z wykorzystaniem klawiszy 1-34 od lewej strony; nacisnąć przycisk CHORD ponownie, aby wyjść z trybu akompaniamentu akordowego.
- Start synchroniczny – wybrać podkład rytmiczny, tempo i akompaniament akordowy; w trybie wyboru podkładu rytmicznego, nacisnąć przycisk SYNCH, aby wejść w tryb startu synchronicznego; zagrać akordy (z wykorzystaniem klawiszy 1-34 od lewej strony), a akompaniament zacznie grać automatycznie; nacisnąć przycisk START/STOP, aby wyłączyć start synchroniczny.
- SETTING – nacisnąć jednokrotnie, aby zwiększyć/zmniejszyć czułość klawiszy za pomocą przycisków SELECT+ i SELECT-; nacisnąć dwukrotnie, aby zwiększyć/zmniejszyć (SELECT+/SELECT-) głośność podkładu rytmicznego (0-32); nacisnąć trzykrotnie, aby zwiększyć/zmniejszyć (SELECT+/SELECT-) tonację (-12 - 12).
- Metronom – nacisnąć przycisk METRONOME, aby włączyć funkcję metronomu – wskaźnik LED podświetli się; nacisnąć przycisk METRONOME ponownie, aby wyłączyć funkcję metronomu.
- Odtwarzanie utworów demo – nacisnąć przycisk DEMO, system przejdzie w tryb odtwarzania utworu demo; za pomocą przycisków SELECT+ i SELECT- wybierać między poszczególnymi utworami DEMO; nacisnąć przycisk DEMO ponownie, aby wyjść z trybu odtwarzania utworu demo.
- Nagrywanie – nacisnąć przycisk REC, aby wejść w tryb nagrywania; nacisnąć przycisk PLAY, aby odtworzyć nagranie.
- SPLIT – wybrać ton; nacisnąć przycisk SPLIT w trybie wyboru tonu – za pomocą przycisków SELECT+/SELECT- wybrać inny ton – klawiatura została podzielona na 2 wybrane tony; nacisnąć przycisk SPLIT ponownie, aby wyłączyć funkcję SPLIT.
- DUAL – wybrać ton; nacisnąć przycisk DUAL w trybie wyboru tonu – za pomocą przycisków SELECT+/SELECT- wybrać inny ton – każdy klawisz ma teraz 2 wybrane tony; nacisnąć przycisk DUAL ponownie, aby wyłączyć funkcję DUAL.

- Odtwarzanie pliku MP3 – umieść urządzenie USB z plikiem MP3 w gnieździe USB; rozpocząć odtwarzanie za pomocą przycisku PLAY/STOP; można wybierać między plikami MP3 na urządzeniu za pomocą przycisków strzałek w górę i w dół.

### Tabela tonów

Number	Instrument		
PIANO		029	GUITAR MUTED 1
001	GRAND PIANO 1	030	GUITAR OVRDRV
002	BRIGHT PIANO 1	031	GUITAR DISTRT 1
003	PIANO ELEC	032	GUITAR HRMNX
004	HONKY-TONK	BASS	
005	E PIANO1	033	ACOUSTIC BASS 1
006	E PIANO2	034	FINGER BASS 1
007	GRAND HARPSICHORD	035	ELECT BASS 1
008	CLAVI CHORD 1	036	FRETLS BASS
GLOCK		037	SLAP BASS 1
009	CELESTA	038	SLAP BASS 2
010	GLOCKENSPIEL 1	039	SYN BASS 1
011	MUSIC BOX 1	040	SYN BASS 2
012	VIBRAPHONE 1	STRING	
013	MARIMBA 1	041	VIOLIN 1
014	XYLOPHONE 1	042	VIOLA 1
015	TUBULR BELLS 1	043	CELLO 1
016	DULCIMER 1	044	CONTRABASS 1
ORGAN		045	STR TREM 1
017	HAND ORGAN 1	046	STR PIZZ
018	PERCHY ORGAN 1	047	HARP 1
019	ROCK ORGAN	048	TIMPANI 1
020	CHURCH ORGAN 1	CONCERT	
021	REED ORGAN 1	049	STRINGS 1
022	ACCORDN 1	050	STRINGS 2
023	HARMONICA 1	051	STR SYN 1
024	TANGO ACCORDN 1	052	STR SYN 2
GUITAR		053	CHOIR AAHS 1
025	GUITAR NYLON 1	054	VOICE OOHS 1
026	GUITAR STEEL 1	055	VOICE SYN
027	GUITAR JAZZ 1	056	ORCH HIT 1
028	GUITAR CLEAN 1	BRASS	
		057	TRUMPT 1
		058	TROMBONE 1
		059	TUBA 1
		060	MUTE TPT 1
		061	FR HORN 1
		062	BRASS SECT 1
		063	BRASS SYN 1
		064	BRASS SYN 2
		PIPE	

## Instrukcja obsługi / User Manual

065	SAX SOPRANO	101	BRIGHT FX	138	GRAND PIANO DARK 1	178	HONKY-TONK /W 3
066	SAX ALTO 1	102	GOBLIN FX	139	GRAND PIANO DARK 2	179	HONKY-TONK /W 4
067	SAX TENOR 1	103	ECHO FX	140	VELOCITY CROSS PIANO 1	180	SHORT HONKY-TONK 1
068	SAX BTONE 1	104	SCI-FI FX	141	VELOCITY CROSS PIANO 2	181	SHORT HONKY-TONK 2
069	OBOE 1	FOLK SOUND		142	SOFT GRAND PIANO 1	182	E PIANO 1/W
070	ENG HORN 1	105	SITAR 1	143	SOFT GRAND PIANO 2	183	E PIANO 2/W
071	BASSON 1	106	BANJO 1	144	SOFT GRAND PIANO 3	184	E PIANO 3/W
072	CLARINET 1	107	SHAMISEN 1	145	STEREO BRIGHT PIANO	185	E PIANO 4/W
WOODPIPE		108	KOTO 1	146	BRIGHT PIANO 2	186	E PIANO 5/W
073	PICCOLO 1	109	KALIMBA	147	BRIGHT PIANO 3	187	E PIANO 6/W
074	FLUTE 1	110	BAGPIPE	148	BRIGHT PIANO 4	188	SOFT E.PIANO 1
075	RECORDER 1	111	FIDDLE	149	BRIGHT PIANO 5	189	SOFT E.PIANO 2
076	PAN FLUTE	112	SHANAI	150	BRIGHT PIANO /W 1	190	SOFT E.PIANO 3
077	BOTTLE BLOWN	PERCUSSION		151	BRIGHT PIANO /W 2	191	SOFT E.PIANO 4
078	SHAKHACHI	113	TINKLE BELL	152	SOFT BRIGHT PIANO 1	192	HARD E.PIANO 1
079	WHISTLE 1	114	AGOGO	153	SOFT BRIGHT PIANO 2	193	HARD E.PIANO 2
080	OCARINA	115	STEEL DRM	154	DEEP BRIGHT PIANO	194	SHORT E.PIANO 1
SYNTH PIPE		116	WOODBK	155	VELOCITY CROSS BRIGHT PIANO	195	SHORT E.PIANO 2
081	SQR WAVE	117	TAIKO DRM	156	DETUNED E.PIANO 1	196	BRIGHTNESS E.P 1
082	SAW TOOTH	118	MLDY TOM	157	DETUNED E.PIANO 2	197	BRIGHTNESS E.P 2
083	CALLIOPE	119	SYNTH DRM	158	DETUNED E.PIANO 3	198	HARPSICHORD 1
084	CHIFF	120	REVR5 CYM	159	DETUNED E.PIANO 3	199	HARPSICHORD 2
085	CHARANG	EFFECT		160	BRIGHT E.PIANO 1	200	SOFT HARPSICHORD 1
086	VOICE	121	GTR NOISE	161	BRIGHT E.PIANO 2	201	SOFT HARPSICHORD 2
087	FIFTHS	122	BREATH 1	162	BRIGHT E.PIANO 3	202	BRIGHT HARPSICHORD 1
088	BASS LEAD	123	SEASHORE	163	BRIGHT E.PIANO 4	203	BRIGHT HARPSICHORD 2
SYNTH VOICE		124	BIRD TWEET 1	164	E.PIANO /W 1	204	DARK HARPSICHORD 1
089	NEW AGE	125	TELEPHONE	165	E.PIANO /W 2	205	DARK HARPSICHORD 2
090	WARM PAD	126	HELICOPTER	166	E.PIANO /W 3	206	HARD HARPSICHORD 1
091	POLY SYNTH	127	APPLAUSE	167	E.PIANO /W 4	207	HARD HARPSICHORD 2
092	CHOIR PAD 1	128	GUNSHOT 1	168	DARK E.PIANO 1	208	CLAVI CHORD 2
093	BOW GLASS 1	129	GRAND PIANO2	169	DARK E.PIANO 2	209	CLAVI CHORD 3
094	METAL PAD 1	130	GRAND PIANO3	170	DARK E.PIANO 3	210	CLAVI /W
095	HALO PAD 1	131	GRAND PIANO4	171	DARK E.PIANO 4	211	BRIGHT CLAVI
096	SWEEP	132	GRAND PIANO /W 1	172	SOFT HONKY-TONK 1	212	DARK CLAVI
SYNTH EFFECT		133	GRAND PIANO /W 2	173	SOFT HONKY-TONK 2	213	PERCHY CLAVI
097	RAIN FX	134	GRAND PIANO /W 3	174	VELOCITY CROSS HONKY-TONK	214	BRIGHT CELESTA
098	SNDTRK FX	135	GRAND PIANO /W 4	175	DARK HONKY-TONK 1	215	SHORT CELESTA
099	CRYSTAL FX	136	BRIGHTNESS PIANO 1	176	DARK HONKY-TONK 2	216	PERCHY CELESTA
100	ATMOSPH FX	137	BRIGHTNESS PIANO 2	177	HONKY-TONK /W 1	217	DUET CELESTA
			BRIGHTNESS PIANO 3		HONKY-TONK /W 2		

218	CELESTA HARMONIC	259	SANTUR	300	SLOW REED ORGAN	341	FAST TANGO ACCORDN
219	GLOCKENSPIEL 2	260	HAND ORGAN 2	301	SOFT REED ORGAN	342	GUITAR NYLON 2
220	GLOCKENSPIEL 3	261	HAND ORGAN 3	302	HARD REED ORGAN	343	GUITAR NYLON 3
221	GLOCKENSPIEL 4	262	SOFT HAND ORGAN	303	JAZZ REED ORGAN	344	GUITAR NYLON 4
222	BRIGHT GLOCKENSPIEL	263	BRIGHT SOFT HAMND ORGAN	304	ACCORDN 2	345	GUITAR NYLON 5
223	DARK GLOCKENSPIEL	264	HAMND ORGAN DETUNED	305	ACCORDN 3	346	GUITAR NYLON 6
224	GLOCKENSPIEL /W 1	265	PERCHY ORGAN 2	306	ACCORDN 4	347	GUITAR NYLON 7
225	GLOCKENSPIEL /W 2	266	PERCHY ORGAN 3	307	ACCORDN 5	348	GUITAR NYLON RELEASE
226	MUSIC BOX 2	267	BRIGHT PERCHY ORGAN	308	DISTR ACCORDN	349	VELOCITY CROSS RUITAR
227	MUSIC BOX 3	268	DISTR PERCHY ORGAN	309	BRIGHT ACCORDN	350	DETUNED GUITAR NYLON
228	MUSIC BOX 4	269	ROTART ORGAN	310	ACCORDN HARMONIC	351	BIRGHT GUITAR NYLON
229	TOY MUSIC BOX	270	SLOW ROTART ORGAN	311	ROCK ACCORDN	352	DARK GUITAR NYLON
230	BRIGHT MUSIC BOX	271	1960 ROCK ORGAN	312	SWEET ACCORDN	353	GUITAR NYLON HARMONIC 1
231	DARK MUSIC BOX	272	1990 ROCK ORGAN	313	DARK ACCORDN	354	GUITAR NYLON HARMONIC 2
232	VIBRAPHONE 2	273	BRIGHT ROCK ORGAN	314	FAST ACCORDN	355	GUITAR NYLON /W 1
233	VIBRAPHONE 3	274	DARK ROCK ORGAN	315	SLOW ACCORDN	356	GUITAR NYLON /W 2
234	SYN VIBRAPHONE	275	SOFT ROCK ORGAN	316	HARMONICA 2	357	GUITAR NYLON FAST
235	HARD VIBRAPHONE	276	CHURCH ORGAN 2	317	HARMONICA 3	358	GUITAR NYLON SLOW
236	VIBRAPHONE /W 1	277	CHURCH ORGAN 3	318	HARMONICA 4	359	HARD GUITAR NYLON
237	VIBRAPHONE /W 2	278	CHURCH ORGAN 4	319	HARMONICA 5	360	SOFT GUITAR NYLON
238	VIBRAPHONE SOFT	279	CHURCH ORGAN 5	320	SWEET HARMONICA	361	GUITAR STEEL 2
239	MARIMBA 2	280	CHURCH ORGAN 6	321	DISTR HARMONICA	362	GUITAR STEEL 3
240	MARIMBA /W	281	CHURCH ORGAN /W 1	322	SLOW HARMONICA	363	GUITAR STEEL 4
241	DARK MARIMBA	282	CHURCH ORGAN /W 2	323	FAST HARMONICA	364	VELOCITY CROSS GUITAR STEEL
242	BRIGHT MARIMBA	283	BIRGHT CHURCH ORGAN 1	324	BRIGHT HARMONICA	365	DARK GUITAR STEEL
243	DUTED MARIMBA	284	BIRGHT CHURCH ORGAN 2	325	DARK HARMONICA	366	BRIGHT GUITAR STEEL
244	DARK MARIMBA	285	DARK CHURCH ORGAN 1	326	SOFT HARMONICA	367	GUITAR STEEL HARMONIC 1
245	XYLOPHONE 2	286	DARK CHURCH ORGAN 2	327	HARMONICA /W 1	368	GUITAR STEEL HARMONIC 2
246	XYLOPHONE 3	287	SOUL CHURCH ORGAN	328	HARMONICA /W 2	369	HARD GUITAR STEEL
247	VELOCITY CROSS XYLOPHONE	288	CHURCH ORGAN HARMONIC	329	HARMONICA MUTED	370	SOFT GUITAR STEEL
248	DISTR XYLOPHONE	289	CHURCH ORGAN SLOW	330	TANGO ACCORDN 2	371	FAST GUITAR STEEL
249	BRIGHT XYLOPHONE	290	CHURCH ORGAN FAST	331	TANGO ACCORDN 3	372	SLOW GUITAR STEEL
250	FAST XYLOPHONE	291	SOFT CHURCH ORGAN	332	1960 TANGO ACCORDN	373	VELOCITY GUITAR STEEL
251	SLOW XYLOPHONE	292	REED ORGAN 2	333	1980 TANGO ACCORDN	374	GUITAR STEEL REALSE
252	TUBULR BELLS 2	293	REED ORGAN 3	334	BRIGHT TANGO ACCORDN	375	GUITAR STEEL /W 1
253	TUBULR BELLS 3	294	REED ORGAN 4	335	DARK TANGO ACCORDN	376	GUITAR STEEL /W 2
254	TUBULR BELLS 4	295	REED ORGAN 5	336	SOFT TANGO ACCORDN	377	GUITAR JAZZ 2
255	SYN TUBULR BELLS	296	BRIGHT REED ORGAN	337	HARD TANGO ACCORDN	378	GUITAR JAZZ 3
256	TUBULR BELLS DARK	297	DARK REED ORGAN	338	TANGO ACCORDN /W 1	379	GUITAR JAZZ 4
257	DULCIMER 2	298	REED ORGAN /W	339	TANGO ACCORDN /W 2	380	GUITAR JAZZ 5
258	DULCIMER 3	299	FAST REED ORGAN	340	SLOW TANGO ACCORDN		

## Instrukcja obsługi / User Manual

381	DARK GUITAR JAZZ
382	BRIGHT GUITAR JAZZ
383	SOFT GUITAR JAZZ
384	HARD GUITAR JAZZ
385	GUITAR JAZZ VELOCITY
386	GUITAR JAZZ RELEASE
387	GUITAR JAZZ HARMONIC
388	SOFT GUITAR JAZZ
389	GUITAR JAZZ /W 1
390	GUITAR JAZZ /W 2
391	GUITAR CLEAN 2
392	GUITAR CLEAN 3
393	GUITAR CLEAN 4
394	GUITAR CLEAN 5
395	VELOCITY CLEAN GUITAR
396	DUTED CLEAN GUITAR
397	BRIGHT CLEAN GUITAR
398	CLEAN GUITAR HARMONIC
399	CLEAN GUITAR /W 1
400	CLEAN GUITAR /W 2
401	SOFT CLEAN GUITAR
402	FAST CLEAN GUITAR
403	SLOW CLEAN GUITAR
404	CLEAN GUITAR RELEASE
405	GUITAR MUTED 2
406	GUITAR MUTED 3
407	GUITAR MUTED 4
408	GUITAR MUTED 5
409	BRIGHT GUITAR MUTED
410	DARK GUITAR MUTED
411	GUITAR MUTED HARMONIC
412	GUITAR MUTED RELEASE
413	GUITAR MUTED CHORUS
414	GUITAR MUTED HARD
415	GUITAR MUTED SOFT
416	GUITAR MUTED /W 1
417	GUITAR MUTED /W 2
418	GUITAR OVRDRV 2
419	GUITAR OVRDRV 3
420	GUITAR OVRDRV 4
421	FUNK GUITAR

422	GUITAR OVRDRV HARMONIC
423	BRIGHT GUITAR OVRDRV
424	DARK GUITAR OVRDRV
425	GUITAR OVRDRV RELEASE
426	HARD GUITAR OVRDRV
427	SOFT GUITAR OVRDRV
428	GUITAR OVRDRV /W 1
429	GUITAR OVRDRV /W 2
430	GUITAR DISTRT 2
431	GUITAR DISTRT 3
432	GUITAR DISTRT 4
433	GUITAR DISTRT 5
434	GUITAR DISTRT 6
435	GUITAR DISTRT HARMONIC
436	GUITAR DISTRT RELEASE
437	BRIGHT GUITAR DISTRT
438	DARK GUITAR DISTRT
439	SOFT GUITAR DISTRT
440	HARMONIC GUITAR DISTRT
441	HARD GUITAR DISTRT
442	GUITAR DISTRT /W 1
443	GUITAR DISTRT /W 2
444	SOFT GUITAR HRMNX
445	HARD GUITAR HRMNX
446	BRIGHT GUITAR HRMNX
447	DARK GUITAR HRMNX
448	FAST GUITAR HRMNX
449	SLOW GUITAR HRMNX
450	GUITAR HRMNX RELEASE
451	GUITAR HRMNX /W 1
452	GUITAR HRMNX /W 2
453	ACOUSTIC BASS 2
454	ACOUSTIC BASS 3
455	ACOUSTIC BASS 4
456	ACOUSTIC BASS 5
457	DETUNED BASS
458	BASS AND FILTER
459	SOFT BASS
460	BASS & RELEASE
461	FAST BASS
462	SLOW BASS

463	BRIGHT BASS
464	DARK BASS
465	BASS /W 1
466	BASS /W 2
467	FINGER BASS 2
468	FINGER BASS HARMONIC
469	SOFT FINGER BASS
470	FINGER BASS RELEASE
471	ELECT BASS 2
472	ELECT BASS 3
473	ELECT BASS 4
474	ELECT BASS 5
475	ELECT BASS 6
476	ELECT BASS RELEASE
477	ELECT BASS HARMONIC
478	SOFT ELECT BASS
479	FAST ELECT BASS
480	PICK BASS
481	BRIGHT ELECT BASS 1
482	BRIGHT ELECT BASS 2
483	DARK ELECT BASS 1
484	DARK ELECT BASS 2
485	SOFT FRETLS BASS
486	FAST FRETLS BASS
487	FRETLS BASS RELEASE
488	FRETLS BASS HARMONIC
489	FRETLESS BASS
490	FAST FRETLESS BASS
491	SLAP BASS 3
492	SLAP BASS 4
493	SLAP BASS 5
494	SLAP BASS 6
495	BRIGHT SLAP BASS 1
496	BRIGHT SLAP BASS 2
497	DARK SLAP BASS 1
498	DARK SLAP BASS 2
499	SOFT SLAP BASS 1
500	SOFT SLAP BASS 2
501	FAST SLAP BASS 1
502	FAST SLAP BASS 2
503	SLOW SLAP BASS 1

504	SLOW SLAP BASS 2
505	SLAP BASS HARMONIC 1
506	SLAP BASS HARMONIC 2
507	SLAP BASS RELEASE 1
508	SLAP BASS RELEASE 2
509	SYN BASS 3
510	SYN BASS 4
511	SYN BASS 5
512	SYN BASS 6
513	SYN BASS HARMONIC 1
514	SYN BASS HARMONIC 2
515	FAST SYN BASS 1
516	FAST SYN BASS 2
517	SOFT SYN BASS 1
518	SOFT SYN BASS 2
519	SLOW SYN BASS 1
520	SLOW SYN BASS 2
521	FAST SYN BASS 1
522	FAST SYN BASS 2
523	BRIGHT SYN BASS 1
524	BRIGHT SYN BASS 2
525	DARK SYN BASS 1
526	DARK SYN BASS 2
527	SYN BASS RELEASE 1
528	SYN BASS RELEASE 2
529	VIOLIN 2
530	VIOLIN 3
531	VIOLIN 4
532	VIOLIN 5
533	VIOLIN ENSEMBLE 1
534	VIOLIN ENSEMBLE 2
535	SLOW VIOLIN
536	FAST VOLIN
537	VOLIN /W
538	BRIGHT VIOLIN
539	DARK VIOLIN
540	SOFT VIOLIN
541	VIOLA 2
542	VIOLA 3
543	VIOLA 4
544	DARK VIOLA

545	HARD VIOLA
546	VIOLA ENSEMBLE
547	SLOW VIOLA
548	VIOLA VIBRATO
549	VIOLA /W
550	BRIGHT VIOLA
551	FAST VIOLA
552	SOFT VIOLA
553	CELLO 2
554	CELLO 3
555	CELLO 4
556	DARK CELLO
557	HARD CELLO
558	CELLO ENSEMBLE 1
559	CELLO ENSEMBLE 2
560	SLOW CELLO
561	FAST CELLO
562	CELLO /W
563	BRIGHT CELLO
564	SOFT CELLO
565	CONTRABASS 2
566	CONTRABASS 3
567	CONTRABASS 4
568	CONTRA BASS ENSEMBLE 1
569	CONTRA BASS ENSEMBLE 2
570	CONTRA BASS ENSEMBLE 3
571	CONTRA BASS ENSEMBLE 4
572	DARK CONTRA BASS
573	CONTRA BASS VIBRATO
574	STR. TREM 2
575	STR. TREM 3
576	STR. TREM 4
577	STR. TREM SLOW
578	STR. TREM FAST
579	STR. TREM /W
580	BRIGHT STR. TREM
581	DARK STR. TREM
582	SOFT STR. TREM
583	BRIGHT STR. PIZZ
584	DARK STR. PIZZ
585	STR. PIZZ HARMONIC

586	STR. PIZZ /W
587	FAST STR. PIZZ
588	SLOW STR. PIZZ
589	SOFT STR. PIZZ
590	METAL STR. PIZZ
591	HARP 2
592	HARP 3
593	HARP 4
594	HARP /W 1
595	HARP /W 2
596	BRIGHT HARP 1
597	BRIGHT HARP 2
598	DARK HARP 1
599	DARK HARP 2
600	HARP HARMONIC
601	SOFT HARMONIC
602	TIMPANI 2
603	TIMPANI 3
604	TIMPANI 4
605	TIMPANI /W 1
606	TIMPANI /W 2
607	BRIGHT TIMPANI
608	DARK TIMPANI
609	STRINGS 3
610	STRINGS 4
611	STRINGS 5
612	STRINGS 6
613	SLOW STRINGS 1
614	SLOW STRINGS 2
615	FAST STRINGS 1
616	FAST STRINGS 2
617	DARK STINGS 1
618	DARK STINGS 2
619	BRIGHT STINGS 1
620	BRIGHT STINGS 2
621	RESONANT STRINGS
622	SPORZATO STRINGS
623	STR. SYN 3
624	STR. SYN 4
625	STR. SYN 5
626	STR. SYN 6

627	1960 STRINGS
628	1970 STRINGS
629	SLOW STRINGS 1
630	SLOW STRINGS 2
631	FAST STRINGS 1
632	FAST STRINGS 2
633	LEGATO STRINGS 1
634	LEGATO STRINGS 2
635	BRIGHT LEGATO STRINGS
636	DARK LEGATO STRINGS
637	CHOIR AAHS 2
638	CHOIR AAHS 3
639	CHOIR AAHS 4
640	CHOIR AAHS 5
641	WARM CHOIR AAHS
642	CHOIR AAHS /W 1
643	CHOIR AAHS /W 2
644	CHOIR AAHS HARMONIC
645	BRIGHT CHOIR AAHS
646	DARK CHOIR AAHS
647	FAST CHOIR AAHS
648	SLOW CHOIR AAHS
649	VOICE OOHs 2
650	WARM VOICE OOHs 1
651	WARM VOICE OOHs 2
652	VOICE OOHs /W
653	BRIGHT VOICE OOHs
654	DARK VOICE OOHs
655	FAST VOICE OOHs
656	SLOW VOICE OOHs
657	VOICE SYN HARMONIC
658	SLOW VOICE SYN
659	FAST VOICE SYN
660	BRIGHT VOICE SYN
661	ELE. VOICE SYN
662	ORCH HIT 2
663	ORCH HIT /W
664	BRIGHT ORCH HIT
665	ORCH HIT HARMONIC
666	SLOW ORCH HIT
667	FAST ORCH HIT

668	DARK ORCH HIT
669	SOFT ORCH HIT
670	TRUMPT 2
671	TRUMPT 3
672	TRUMPT 4
673	TRUMPT 5
674	TRUMPT 6
675	TRUMPT 7
676	DARK TRUMPT
677	BRIGHT TRUMPT
678	SWEET TRUMPT
679	MUTE TRUMPT
680	TRUMPT /W 1
681	TRUMPT /W 2
682	TROMBONE 2
683	TROMBONE 3
684	TROMBONE 4
685	TROMBONE 5
686	TROMBONE 6
687	TROMBONE 7
688	DARK TROMBONE
689	BRIGHT TROMBONE
690	SLOW BRIGHT TROMBONE
691	MUTE TROMBONE
692	TROMBONE /W
693	TUBA 2
694	TUBA 3
695	TUBA 4
696	TUBA 5
697	TUBA 6
698	SOFT TUBA
699	SLOW TUBA
700	TUBA SOLO
701	TUBA /W
702	BRIGHT TUBA
703	DARK TUBA
704	MUTE TUBA
705	MUTE TPT 2
706	DARK MUTE TPT
707	BRIGHT MUTE TPT
708	MUTE TPT /W



## Instrukcja obsługi / User Manual

709	SWEET MUTE TPT	750	SAX ALTO 6	791	ANALOG ENG HORN	832	PAN FLUTE FAST
710	FR HORN 2	751	SAX ALTO BRIGHT	792	WOODWINDS	833	PAN FLUTE HARMONIC
711	FR HORN 3	752	SAX ALTO MUTE	793	BASSON 2	834	PAN FLUTE DUTE
712	FR HORN 4	753	SAX ALTO /W	794	BASSON 3	835	PAN FLUTE/W
713	FR HORN 5	754	SOFT SAX ALTO	795	BASSON 4	836	BRIGHT PAN FLUTE
714	FR HORN 6	755	SLOW SAX ALTO	796	BASSON 5	837	BOTTLE BLOWN DARK
715	SWEET FR HORN	756	SWEET SAX ALTO	797	BRIGHT BASSON	838	BOTTLE BLOWN BRIGHTNESS
716	SLOW FR HORN	757	SAX TENOR 2	798	DARK BASSON	839	BOTTLE BLOWN WARM
717	FAST FR HORN	758	SAX TENOR 3	799	BASSON WELL	840	SOFT BOTTLE BLOWN
718	BRIGHT FR HORN	759	SAX TENOR 4	800	BRIGHT BASSON	841	SHAKHACHI HARMONIC
719	DARK FR HORN	760	SAX TENOR 5	801	MUTE BASSON	842	SHAKHACHI BRIGHT
720	BRASS SECT 2	761	SAX TENOR 6	802	SOFT BASSON	843	SHAKHACHI DARK
721	BRASS SECT 3	762	SWEET SAX TENOR	803	CLARINET 2	844	SLOW SHAKHACHI
722	BRASS SECT 4	763	DARK SAX TENOR	804	CLARINET 3	845	FAST SHAKHACHI
723	BRASS SECT 5	764	SUPER SAX TENOR	805	CLARINET 4	846	WHISTLE 2
724	BRASS SECT 6	765	SAX TENOR /W 1	806	CLARINET 5	847	WHISTLE 3
725	DARK BRASS SECT	766	SAX TENOR /W 2	807	CLARINET HARMONIC	848	WHISTLE 4
726	BRASS SECT WELL	767	SAX TENOR HARMONIC	808	DARK CLARINET	849	WHISTLE 5
727	BRIGHT BRASS SECT	768	SAX TENOR BRIGHT	809	BRIGHT CLARINET	850	SQUARE
728	FAST BRASS SECT	769	SAX BTONE 2	810	CLARINET WELL	851	SINE LEAD
729	SLOW BRASS SECT	770	SAX BTONE 3	811	CLARINET MUTE	852	SINE SLOW
730	BRASS SECT /W	771	SAX BTONE 4	812	CLARINET SOFT	853	SINE FAST
731	BRASS SYN 3	772	SAX BTONE 5	813	PICCOLO 2	854	SAW SLOW
732	BRASS SYN 4	773	SAX BTONE WELL	814	PICCOLO 3	855	SAW FAST
733	BRASS SYN 5	774	MUTE SAX BTONE	815	PICCOLO 4	856	SAW HARMONIC
734	BRASS SYN 6	775	SWEET SAX BTONE	816	PICCOLO DARK	857	VOICE LEAD
735	BRASS SYN 7	776	DARK SAX BTONE	817	PICCOLO HARMONIC	858	VOICE SLOW
736	SOFT BRASS SYN	777	OBOE 2	818	BRIGHT PICCOLO	859	VOICE FAST
737	SFORZATO BRASS SYN	778	OBOE 3	819	SOFT PICCOLO	860	SOFT STH LEAD
738	DARK BRASS SYN	779	OBOE 4	820	FLUTE 2	861	STH LEAD
739	BRIGHT BRASS SYN	780	OBOE 5	821	FLUTE 3	862	MASSINESS
740	WELL BRASS SYN	781	SWEET OBOE	822	FLUTE 4	863	BASS & LEAD
741	MUTE BRASS SYN	782	OBOE WELL	823	FLUTE HARMONIC	864	NEW AGE SLOW
742	SWEET BRASS SYN	783	BRIGHT OBOE	824	DARK FLUTE	865	NEW AGE FAST
743	HOMONIC BRASS SYN	784	DARK OBOE	825	BRIGHT FLUTE	866	NEW AGE HARMONIC
744	SLOW BRASS SYN	785	MUTE OBOE	826	FLUTE MUTE	867	WARM PAD FAST
745	FAST BRASS SYN	786	ENG HORN 2	827	SOFT FLUTE	868	WARM PAD SLOW
746	SAX ALTO 2	787	ENG HORN 3	828	RECORDER 2	869	WARM PAD HARMONIC
747	SAX ALTO 3	788	ENG HORN 4	829	RECORDER 3	870	PWM PAD
748	SAX ALTO 4	789	ENG HORN 5	830	RECORDER 4	871	POLY SYNTH SLOW
749	SAX ALTO 5	790	ENG HORN 6	831	PAN FLUTE SLOW	872	POLY SYNTH FAST

873	CLICK PAD
874	ANALOG PAD
875	POLY PAD
876	CHOIR PAD 2
877	CHOID PAD HARMONIC
878	BOW GLASS 2
879	BOW GLASS HARMONIC
880	METAL PAD 2
881	PAN PAD 1
882	PAN PAD 2
883	HALO PAD 2
884	HALO PAD 3
885	DISPERSE
886	RISING
887	CONGREGATE
888	PROGENITOR
889	PRELUDE
890	WARM AIR
891	SMOG
892	PAN ECHO
893	LARGE PAN
894	ECHO SLOW
895	FANTASYLAND
896	SITAR 2
897	SITAR 3
898	SITAR 4
899	DISTRIT SITAR
900	BRIGHT SITAR

Tabela podkładów rytmicznych

	Number	Instrument			
8 BEAT	001	8 Beat 1A			
	002	8 Beat 2A			
	003	8 Beat 3A			
BALLAD	004	8 Beat 4A			
	005	8 Beat HeatA			
	006	8 Beat Pop 1A			
	007	8 Beat Pop 2A			
	008	Ballad 1A			
	009	Ballad 2A			
16 BEAT	010	Guitar BalladA			
	011	Organ BalladA			
	012	Bluse BalladA			
	013	Epic BalladA			
	014	Rock BalladA			
	015	Slow BalladA			
	016	Pop Ballad			
	017	Electro Pop BalladA			
	018	Polk BalladA			
LATIN	019	16 Beat 1A			
	020	16 Beat 2A			
	021	16 Beat 3A			
	022	16 Beat 4A			
	023	16 Beat FunkA			
	024	16 Beat Pop A			
COUNTRY	025	16 Beat BalladA			
	026	Bossa Nova 1A			
	027	Guitar BossaA			
	028	Pop BossaA			
	029	TangoA			
	030	Cha ChaA			
	031	RhumbaA			
ROCK R&B	032	TEX TEXA			
	033	CountryA			
	034	Country RockA			
	035	Country ShuffleA			
TRADITIONAL	036	Country SwingA			
	037	Country BalladA			
	038	Country WaltzA			
	039	50's RockA			
	040	Heavy MetalA			
RHYTHM&BLUES	041	Rock 1A			
	042	Rock 2A			
	043	Soft RockA			
	044	Slow RockA			
DISCO	045	Hard RockA			
	046	Rock & Roll 1A			
	047	Rock & Roll 2A			
	048	Chicago BluesA			
	049	Fast GospelA			
	050	Groove SoulA			
	051	RapA			
	052	GospelS1A			
	053	BluesA			
	054	Slow BluesA			
WORLD MUSIC	055	FoxtrotA			
	056	Disco TropicA			
	057	Disco HandsA			
	058	Two StepA			
	059	Polk PopA			
	060	Waltz 1A			
	061	Waltz Pop 1A			
	062	Waltz Pop 2A			
	063	RaiA			
	064	Twist 1A			
DANCE	065	Twist 2A			
	066	Miami PopA			
	067	MotownA			
	068	ReggaeA			
	069	Swing ReggaeA			
	070	MerboA			
	071	BeguineA			
	072	MusetteA			
	073	HouseA			
	074	Slow FoxA			
JAZZ&SWING	075	Vienna WaltzA			
	076	SalsaA			
	077	DiscoA			
	078	Hip Hop PopA			
	079	Analog PopA			
	080	Club DanceA			
	081	BoogieA			
	082	Funky PopA			
	083	Jazz RockA			
	084	Swing 1A			
PINIST	085	DixielandA			
	086	Jazz SambaA			
	087	MarchA			
	088	US. MarchA			
	089	Samba A			
	090	PolkaA			
	091	Polka OberA			
	092	TarantellaA			
	093	Slow WaltzA			
	094	Ober WaltzA			
8 BEAT	095	Piano BalladA			
	096	Waltz 2A			
	097	Guitar WaltzA			
	098	2/4 Piano 1A			
	099	3/4 Piano 1A			
	100	4/4 Piano 1A			
	101	8 Beat 1B			
	102	8 Beat 2B			
	103	8 Beat 3B			
	104	8 Beat 4B			
BALLAD	105	8 Beat HeatB			
	106	8 Beat Pop 1B			
	107	8 Beat Pop 2B			
	108	Ballad 1B			
	109	Ballad 2B			
	110	Guitar BalladB			
	111	Organ BalladB			
	112	Bluse BalladB			
	113	Epic BalladB			
	114	Rock BalladB			
16 BEAT	115	Slow BalladB			
	116	Pop BalladB			
	117	Electro Pop BalladB			
	118	Polk BalladB			
	119	16 Beat 1B			
	120	16 Beat 2B			
	121	16 Beat 3B			
	122	16 Beat 4B			
	123	16 Beat FunkB			
	124	16 Beat Pop B			
COUNTRY	125	16 Beat BalladB			
	126	Bossa Nova 1B			
	127	Guitar BossaB			
	128	Pop BossaB			
	129	TangoB			
	130	Cha ChaB			
	131	RhumbaB			
	132	TEX TEXTB			
	133	CountryB			
	134	Country RockB			
COUNTRY	135	Country ShuffleB			
	136	Country SwingB			
	137	Country BalladB			
	138	Country WaltzB			

Instrukcja obsługi / User Manual

ROCK R&B	139	50's RockB		186	Jazz SambaB
	140	Heavy MetalB		187	MarchB
	141	Rock 1B	TRADITIONAL	188	US. MarchB
	142	Rock 2B		189	SambaB
	143	Soft RockB		190	PolkaB
	144	Slow RockB		191	Polka OberB
	145	Hard RockB		192	TarantellaB
	146	Rock & Roll 1B		193	Slow WaltzB
	147	Rock & Roll 2B		194	Ober WaltzB
RHYTHM&BLUES	148	Chicago BluesB	PINIST	195	Piano BalladB
	149	Fast GospelB		196	Waltz 2B
	150	Groove SoulB		197	Guitar WaltzB
	151	RapB		198	2/4 Piano 1B
	152	GospelS1B		199	3/4 Piano 1B
	153	BluesB		200	4/4 Piano 1B
	154	Slow BluesB	8 BEAT	201	8 Beat 1I
	155	FoxtrotB		202	8 Beat 2I
Disco	156	Disco TropicB		203	8 Beat 3I
	157	Disco HandsB		204	8 Beat 4I
	158	Two StepB		205	8 Beat HeatI
	159	Polk PopB		206	8 Beat Pop 1I
	160	Waltz 1B		207	8 Beat Pop 2I
	161	Waltz Pop 1B	BALLAD	208	Ballad 1I
	162	Waltz Pop 2B		209	Ballad 2I
WORLD MUSIC	163	RaiB		210	Guitar BalladI
	164	Twist 1B		211	Organ BalladI
	165	Twist 2B		212	Bluse BalladI
	166	Miami PopB		213	Epic BalladI
	167	MotownB		214	Rock BalladI
	168	ReggaeB		215	Slow BalladI
	169	Spring ReggaeB		216	Pop BalladI
	170	MamboB		217	Electro Pop BalladI
	171	BeguineB	16 BEAT	218	Polk BalladI
	172	MusetteB		219	16 Beat 1I
DANCE	173	HouseB		220	16 Beat 2I
	174	Slow FoxB		221	16 Beat 3I
	175	Vienna WaltzB		222	16 Beat 4I
	176	SalsaB		223	16 Beat FunkI
	177	DiscoB		224	16 Beat Pop 1
	178	Hip Hop PopB		225	16 Beat BalladI
	179	Analog PopB	LATIN	226	Bossa Nova 1I
	180	Club DanceB		227	Guitar BossaI
JAZZ&SWING	181	BoogieB		228	Pop BossaI
	182	Funky PopB		229	TangoI
	183	Jazz RockB		230	Cha ChaI
	184	Swing 1B		231	RhumbaI
	185	DixielandB		232	TEX TEXI

COUNTRY	233	CountryI		280	Club DanceI
	234	Country RockI	JAZZ&SWING	281	BoogieI
	235	Country ShuffleI		282	Funky PopI
	236	Country SwingI		283	Jazz RockI
	237	Country BalladI		284	Swing 1I
	238	Country WaltzI		285	DixielandI
ROCK R&B	239	50's RockI	TRADITIONAL	286	Jazz SambaI
	240	Heavy MetalI		287	MarchI
	241	Rock 1I		288	US. MarchI
	242	Rock 2I		289	SambaI
	243	Soft RockI		290	PolkaI
	244	Slow RockI		291	Polka OberI
	245	Hard RockI		292	TarantellaI
	246	Rock & Roll 1I		293	Slow WaltzI
	247	Rock & Roll 2I		294	Ober WaltzI
RHYTHM&BLUES	248	Chicago BluesI	PINIST	295	Piano BalladI
	249	Fast GospelI		296	Waltz 2I
	250	Groove SoulI		297	Guitar WaltzI
	251	RapI		298	2/4 Piano 1I
	252	GospelS1I		299	3/4 Piano 1I
	253	BluesI		300	4/4 Piano 1I
	254	Slow BluesI	8 BEAT	301	8 Beat 1E
	255	FoxtrotI		302	8 Beat 2E
Disco	256	Disco TropicI		303	8 Beat 3E
	257	Disco HandsI		304	8 Beat 4E
	258	Two StepI		305	8 Beat HeatE
	259	Polk PopI		306	8 Beat Pop 1E
	260	Waltz 1I		307	8 Beat Pop 2E
	261	Waltz Pop 1I	BALLAD	308	Ballad 1E
	262	Waltz Pop 2I		309	Ballad 2E
WORLD MUSIC	263	RaiI		310	Guitar BalladE
	264	Twist 1I		311	Organ BalladE
	265	Twist 2I		312	Bluse BalladE
	266	Miami PopI		313	Epic BalladE
	267	MotownI		314	Rock BalladE
	268	ReggaeI		315	Slow BalladE
	269	Swing ReggaeI		316	Pop BalladE
	270	MamboI		317	Electro Pop BalladE
	271	BeguineI		318	Polk BalladE
	272	MusetteI	16 BEAT	319	16 Beat 1E
DANCE	273	HouseI		320	16 Beat 2E
	274	Slow FoxI		321	16 Beat 3E
	275	Vienna WaltzI		322	16 Beat 4E
	276	SalsaI		323	16 Beat FunkE
	277	DiscoI		324	16 Beat Pop E
	278	Hip Hop PopI		325	16 Beat BalladE
	279	Analog PopI	LATIN	326	Bossa Nova 1E

LATIN	327	Guitar BossaB
	328	Pop BossaB
	329	TangoB
	330	Cha ChaB
	331	RhumbaB
	332	TEX TEXE
COUNTRY	333	CountryE
	334	Country RockE
	335	Country ShuffleE
	336	Country SwingE
	337	Country BalladE
	338	Country WaltzE
ROCK R&B	339	50's RockE
	340	Heavy MetalE
	341	Rock 1E
	342	Rock 2E
	343	Soft RockE
	344	Slow RockE
	345	Hard RockE
	346	Rock & Roll 1E
	347	Rock & Roll 2E
RHYTHM&BLUES	348	Chicago BluesE
	349	Fast GospelE
	350	Groove SoulE
	351	RapE
	352	GospelS1E
	353	BluesE
	354	Slow BluesE
	355	FoxtrotE
Disco	356	Disco TropicE
	357	Disco HandsE
	358	Two StepE
	359	Polk PopE
	360	Waltz 1E
	361	Waltz Pop 1E
	362	Waltz Pop 2E
WORLD MUSIC	363	RaiE
	364	Twist 1E
	365	Twist 2E
	366	Miami PopE
	367	MotownE
	368	ReggaeE
	369	Spring ReggaeE
	370	MamboE
	371	BeguineE
	372	MusetteE
	373	HouseE

DANCE MUSIC	374	Slow FoxE
	375	Vienna WaltzE
	376	SalsaE
	377	DiscoE
	378	Hip Hop PopE
	379	Analog PopE
	380	Club DanceE
JAZZ&SWING	381	BoogieE
	382	Funky PopE
	383	Jazz RockE
	384	Swing 1E
	385	DixielandE
	386	Jazz SambaE
TRADITIONAL	387	MarchE
	388	US. MarchE
	389	SambaE
	390	PolkaE
	391	Polka OberE
	392	TarantellaE
	393	Slow WaltzE
	394	Ober WaltzE
PINIST	395	Piano BalladE
	396	Waltz 2E
	397	Guitar WaltzE
	398	2/4 Piano 1E
	399	3/4 Piano 1E
	400	4/4 Piano 1E
8 BEAT	401	8 Beat 1AF
	402	8 Beat 2AF
	403	8 Beat 3AF
	404	8 Beat 4AF
	405	8 Beat HeatAF
	406	8 Beat Pop 1AF
	407	8 Beat Pop 2AF
BALLAD	408	Ballad 1AF
	409	Ballad 2AF
	410	Guitar BalladAF
	411	Organ BalladAF
	412	Bluse BalladAF
	413	Epic BalladAF
	414	Rock BalladAF
	415	Slow BalladAF
	416	Pop BalladAF
	417	Electro Pop BalladAF
	418	Polk BalladAF
16 BEAT	419	16 Beat 1AF
	420	16 Beat 2AF

	421	16 Beat 3AF
	422	16 Beat 4AF
	423	16 Beat HeatAF
	424	16 Beat Pop 1AF
	425	16 Beat Pop 2AF
LATIN	426	Bossa Nova 1AF
	427	Guitar BossaAF
	428	Pop BossaAF
	429	TangoAF
	430	Cha ChaAF
	431	RhumbaAF
	432	TEX TEXAF
COUNTRY	433	CountryAF
	434	Country RockAF
	435	Country ShuffleAF
	436	Country SwingAF
	437	Country BalladAF
	438	Country WaltzAF
ROCK R&B	439	50's RockAF
	440	Heavy MetalAF
	441	Rock 1AF
	442	Rock 2AF
	443	Soft RockAF
	444	Slow RockAF
	445	Hard RockAF
	446	Rock & Roll 1AF
	447	Rock & Roll 2AF
RHYTHM&BLUES	448	Chicago BluesAF
	449	Fast GospelAF
	450	Groove SoulAF
	451	RapAF
	452	GospelS1AF
	453	BluesAF
	454	Slow BluesAF
	455	FoxtrotAF
Disco	456	Disco TropicAF
	457	Disco HandsAF
	458	Two StepAF
	459	Polk PopAF
	460	Waltz 1AF
	461	Waltz Pop 1AF
	462	Waltz Pop 2AF
WORLD MUSIC	463	RaiAF
	464	Twist 1AF
	465	Twist 2AF
	466	Miami PopAF
	467	MotownAF

	468	ReggaeAF
	469	Spring ReggaeAF
	470	MamboAF
	471	BeguineAF
	472	MusetteAF
DANCE	473	HouseAF
	474	Slow FoxAF
	475	Vienna WaltzAF
	476	SalsaAF
	477	DiscoAF
	478	Hip Hop PopAF
	479	Analog PopAF
	480	Club DanceAF
JAZZ&SWING	481	BoogieAF
	482	Funky PopAF
	483	Jazz RockAF
	484	Swing 1AF
	485	DixielandAF
	486	Jazz SambaAF
TRADITIONAL	487	MarchAF
	488	US. MarchAF
	489	SambaAF
	490	PolkaAF
	491	Polka OberAF
	492	TarantellaAF
	493	Slow WaltzAF
	494	Ober WaltzAF
PINIST	495	Piano BalladAF
	496	Waltz 2AF
	497	Guitar WaltzAF
	498	2/4 Piano 1AF
	499	3/4 Piano 1AF
	500	4/4 Piano 1AF
8 BEAT	501	8 Beat 1BF
	502	8 Beat 2BF
	503	8 Beat 3BF
	504	8 Beat 4BF
	505	8 Beat HeatBF
	506	8 Beat Pop 1BF
	507	8 Beat Pop 2BF
BALLAD	508	Ballad 1BF
	509	Ballad 2BF
	510	Guitar BalladBF
	511	Organ BalladBF
	512	Bluse BalladBF
	513	Epic BalladBF
	514	Rock BalladBF

## Instrukcja obsługi / User Manual

	515	Slow BalladBF		562	Waltz Pop 2BF		609	Ballad 2C		656	Disco TropicC
	516	Pop BalladBF		563	RaiBF		610	Guitar BalladC		657	Disco HandsC
	517	Electro Pop BalladBF	<b>WORLD MUSIC</b>	564	Twist 1BF		611	Organ BalladC		658	Two StepC
	518	Polk BalladBF		565	Twist 2BF		612	Bluse BalladC		659	Polk PopC
<b>16 BEAT</b>	519	16 Beat 1BF		566	Miami PopBF		613	Epic BalladC	<b>DANCE</b>	660	Waltz 1C
	520	16 Beat 2BF		567	WorowBF		614	Rock BalladC		661	Waltz Pop 1C
	521	16 Beat 3BF		568	ReggaeBF		615	Slow BalladC		662	Waltz Pop 2C
	522	16 Beat 4BF		569	Swing ReggaeBF		616	Pop BalladC		663	RaiC
	523	16 Beat FunkBF		570	MamboBF		617	Electro Pop Ballad		664	Twist 1C
	524	16 Beat Pop BF		571	BeguineBF		618	Polk BalladC		665	Twist 2C
	525	16 Beat BalladBF		572	MusetteBF		619	16 Beat 1C		666	Miami PopC
<b>LATIN</b>	526	Bossa Nova 1BF	<b>DANCE</b>	573	HouseBF		620	16 Beat 2C		667	NotornC
	527	Guitar BossaBF		574	Slow FoxBF		621	16 Beat 3C		668	ReggaeC
	528	Pop BossaBF		575	Vienna WaltzBF		622	16 Beat 4C		669	Swing ReggaeC
	529	TangoBF		576	SalsaBF		623	16 Beat PunkC		670	MamboC
	530	Cha ChaBF		577	DiscoBF		624	16 Beat Pop C		671	BeguineC
	531	RhumbaBF		578	Hip Hop PopBF		625	16 Beat BalladC		672	MusetteC
	532	TEX TEXBF		579	Analog PopBF		626	Bossa Nova 1C		673	HouseC
<b>COUNTRY</b>	533	CountryBF		580	Club DanceBF		627	Guitar BossaC		674	Slow FoxC
	534	Country RockBF	<b>JAZZ&amp;SWING</b>	581	BoogieBF		628	Pop BossaC		675	Vienna WaltzC
	535	Country ShuffleBF		582	Funky PopBF		629	TangoC		676	SalsaC
	536	Country SwingBF		583	Jazz RockBF		630	Cha ChaC		677	DiscoC
	537	Country BalladBF		584	Swing 1BF		631	RhumbaC		678	Hip Hop PopC
	538	Country WaltzBF		585	DixielandBF		632	TRX TRXC		679	Analog PopC
<b>ROCK &amp; R&amp;B</b>	539	50's RockBF		586	Jazz SambaBF		633	CountryC		680	Club DanceC
	540	Heavy MetalBF	<b>TRADITIONAL</b>	587	MarchBF		634	Country RockC		681	BoogieC
	541	Rock 1BF		588	US MarchBF		635	Country ShuffleC		682	Funky PopC
	542	Rock 2BF		589	SambaBF		636	Country SwingC		683	Jazz RockC
	543	Soft RockBF		590	PolkaBF		637	Country BalladC		684	Swing 1C
	544	Slow RockBF		591	Polka OberBF		638	Country WaltzC		685	DixielandC
	545	Hard RockBF		592	TarantellaBF		639	50's RockC		686	Jazz SambaC
	546	Rock & Roll 1BF		593	Slow WaltzBF		640	Heavy MetalC		687	MarchC
	547	Rock & Roll 2BF		594	Ober WaltzBF		641	Rock 1C		688	US MarchC
<b>RHYTHM&amp;BLUES</b>	548	Chicago BluesBF	<b>PINIST</b>	595	Piano BalladBF		642	Rock 2C		689	SambaC
	549	Fast GospelBF		596	Waltz 2BF		643	Soft RockC		690	PolkaC
	550	Groove SoulBF		597	Guitar WaltzBF		644	Slow RockC		691	Polka OberC
	551	RapBF		598	2/4 Piano 1BF		645	Hard RockC		692	TarantellaC
	552	GospelS1BF		599	3/4 Piano 1BF		646	Rock & Roll 1C	<b>JAZZ&amp;SWING</b>	693	Slow WaltzC
	553	BluesBF		600	4/4 Piano 1BF		647	Rock & Roll 2C		694	Ober WaltzC
	554	Slow BluesBF	<b>8 BEAT</b>	601	8 Beat 1C		648	Chicago BluesC		695	Piano BalladC
	555	FoxtrotBF		602	8 Beat 2C		649	Fast GospelC		696	Waltz 2C
<b>Disco</b>	556	Disco TropicBF		603	8 Beat 3C		650	Groove SoulC		697	Guitar WaltzC
	557	Disco HandsBF		604	8 Beat 4C		651	RapC		698	2/4 Piano 1C
	558	Two StepBF		605	8 Beat Hea1C		652	GospelS1C		699	3/4 Piano 1C
	559	Polk PopBF		606	8 Beat Pop 1C		653	BluesC		700	4/4 Piano 1C
	560	Waltz 1BF		607	8 Beat Pop 2C		654	Slow BluesC			
	561	Waltz Pop 1BF		608	Ballad 1C		655	FoxtrotC			

Tabela utworów demonstracyjnych

NO	SongName	029	HapyBirh	058	SingKite	087	Beyer 90
001	MinutWlz	030	PraiseSng	059	TongChil	088	Beyer 98
002	DJ Dance	031	Dolly	060	DoReMi	089	Beyer 99
003	Fountain	032	Market	061	We Happy	090	Beyer 26
004	SpanGirl	033	Family	062	LittlBee	091	Beyer 27
005	SonataPn	034	A cradle	063	Russia	092	Beyer 28
006	SuperSng	035	At Home	064	Plaster	093	Beyer 29
007	LittlBee	036	Seasons	065	Foison	094	Beyer 31
008	HorseRac	037	YearsAgo	066	JingleBe	095	Beyer 106
009	Nocturne	038	Pigeons	067	PaperBoy	096	Beyer 48
010	TheSpain	039	InnerVic	068	Swallow	097	Beyer 52
011	BusyTran	040	Violin	069	New Year	098	Beyer 107
012	Mexico	041	Swan	070	Edelweis	099	Beyer 18
013	MozartPn	042	Musettes	071	MoonRivr	100	Beyer 21
014	Minuet	043	GypsyRnd	072	Beyer 10	101	Beyer 23
015	Nifuma	044	Serenade	073	Beyer 20	102	Beyer 25
016	Disco	045	Polka	074	Beyer 30	103	Beyer 36
017	FolkSong	046	SoilPull	075	Beyer 40	104	Beyer 84
018	Girl Sea	047	Trout	076	Beyer 50	105	Beyer 88
019	LittStar	048	Send-off	077	Beyer 60	106	Beyer 32
020	KindeGtn	049	March	078	Beyer 70	107	Beyer 35
021	Wahaha	050	ForElise	079	Beyer 71	108	Beyer 11
022	Duck&Cik	051	SwaniRiv	080	Beyer 72	109	Beyer 16
023	Humorous	052	France	081	Beyer 75	110	Beyer 18
024	Joy Song	053	Danube	082	Beyer 76		
025	GoingHom	054	Hungary	083	Beyer 77		
026	Dove	055	Spaceman	084	Beyer 78		
027	Auldlang	056	Patriot	085	Beyer 79		
028	Moonligh	057	Cuckoo	086	Beyer 80		

Lista akordów jednopalcowych (single finger chord)

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Lista akordów wielopalcowych (multi-finger chord)

C	Cm	C7	Cm7	Cdim7	CM7	Cm7-5	Cdim	Caug	Csus4	C7sus4	Cm add9	CmM7	C7-5	Cadd9
C#(D#)	C#(D#)m	C#(D#)7	C#(D#)m7	C#(D#)dim7	C#(D#)M7	C#(D#)m7-5	C#(D#)dim	C#(D#)aug	C#(D#)sus4	C#(D#)7sus4	C#(D#)m add9	C#(D#)mM7	C#(D#)7-5	C#(D#)add9
D	Dm	D7	Dm7	Ddim7	DM7	Dm7-5	Ddim	Daug	Dsus4	D7sus4	Dm add9	DmM7	D7-5	Dadd9
D#(E#)	D#(E#)m	D#(E#)7	D#(E#)m7	D#(E#)dim7	D#(E#)M7	D#(E#)m7-5	D#(E#)dim	D#(E#)aug	D#(E#)sus4	D#(E#)7sus4	D#(E#)m add9	D#(E#)mM7	D#(E#)7-5	D#(E#)add9
E	Em	E7	Em7	Edim	EM7	Em7-5	Edim	Esus4	E7sus4	E7sus4	Em add9	EmM7	E7-5	Eadd9
F	Fm	F7	Fm7	Fdim	FM7	Fm7-5	Fdim	Fsus4	F7sus4	F7sus4	Fm add9	FmM7	F7-5	Fadd9
F#(G#)	F#(G#)m	F#(G#)7	F#(G#)m7	F#(G#)dim	F#(G#)M7	F#(G#)m7-5	F#(G#)dim	F#(G#)sus4	F#(G#)7sus4	F#(G#)7sus4	F#(G#)m add9	F#(G#)mM7	F#(G#)7-5	F#(G#)add9
G	Gm	G7	Gm7	Gdim	GM7	Gm7-5	Gdim	Gsus4	G7sus4	G7sus4	Gm add9	GmM7	G7-5	Gadd9
G#(A#)	G#(A#)m	G#(A#)7	G#(A#)m7	G#(A#)dim	G#(A#)M7	G#(A#)m7-5	G#(A#)dim	G#(A#)sus4	G#(A#)7sus4	G#(A#)7sus4	G#(A#)m add9	G#(A#)mM7	G#(A#)7-5	G#(A#)add9
A	Am	A7	Am7	Adim	AM7	Am7-5	Adim	Asus4	A7sus4	A7sus4	Am add9	AmM7	A7-5	Aadd9
A#(B#)	A#(B#)m	A#(B#)7	A#(B#)m7	A#(B#)dim	A#(B#)M7	A#(B#)m7-5	A#(B#)dim	A#(B#)sus4	A#(B#)7sus4	A#(B#)7sus4	A#(B#)m add9	A#(B#)mM7	A#(B#)7-5	A#(B#)add9
B	Bm	B7	Bm7	Bdim	BM7	Bm7-5	Bdim	Bsus4	B7sus4	B7sus4	Bm add9	BmM7	B7-5	Badd9

## **Informacja o zużytych sprzęcie elektrycznym i elektronicznym**











Głównym celem regulacji europejskich oraz krajowych jest ograniczenie ilości odpadów powstałych ze zużytego sprzętu elektrycznego i elektronicznego, zapewnienie odpowiedniego poziomu jego zbierania, odzysku i recyklingu oraz zwiększenie świadomości społecznej o jego szkodliwości dla środowiska naturalnego, na każdym etapie użytkowania sprzętu elektrycznego i elektronicznego. W związku z powyższym należy wskazać, iż gospodarstwa domowe spełniają kluczową rolę w przyczynianiu się do ponownego użycia i odzysku, w tym recyklingu zużytego sprzętu. Użytkownik sprzętu przeznaczonego dla gospodarstw domowych jest zobowiązany po jego zużyciu do oddania zbierającemu zużyty sprzęt elektryczny i elektroniczny. Należy jednak pamiętać, aby produkty należące do grupy sprzętu elektrycznego lub elektronicznego utylizowane były w uprawnionych do tego punktach zbiórki.

**ENGLISH**

**Table of contents**

Safety rules.....	15
Device maintenance .....	15
Device construction and operation.....	16
Information about used electrical and electronic equipment .....	26

## Safety rules

	Please read the user manual in detail before use. Please also keep it for future reference. The manual contains rules for the safe use of the device.
	After receiving the product, please unpack and check whether it is complete and whether there is any damage caused by transportation. If there is damage caused by transportation, please do not use this product and contact the dealer or manufacturer as soon as possible.
	<b>WARNING! THE DEVICE MUST NOT BE DISPOSED OF WITH HOUSEHOLD WASTE.</b> This symbol indicates that this product must not be disposed of with household waste, according to the EU and your national law. In order to prevent potential damage to the environment or health, the used product must be recycled. In accordance with current legislation, unusable electrical and electronic devices must be collected separately at the designated facilities for recycling, acting on the basis of applicable environmental standards.
	The product described in this manual comply with European directives and it is therefore CE marked.
	Keep the device away from children and unqualified persons. The manufacturer is not liable for damage caused by improper use.
	Before use, make sure the housing is not damaged.
	Use only the dedicated DC 9-12V power supply included with the product! Disconnect the product from the power supply by pulling on the power plug – do not pull directly on the power cord! Disconnect the device from the power supply before removing the housing or performing maintenance. If you find the power cord is damaged – do not use it!
	Indoor device, use in a well-ventilated room, keep away from moisture. Do not expose the product to direct sunlight. Do not store or use the device near a fire source!
	Do not expose the device to high temperatures!
	In the event of a malfunction, disconnect the device from the power supply immediately!


## Device maintenance

1. The device may only be used by qualified personnel, damage caused by improper use or attempted repair is not covered by the warranty. There are no service parts inside the packaging, repairs may only be carried out by authorized service center.
2. Do not allow the product to come into contact with oil, grease or any similar liquid!
3. Regular cleaning allows of long term use and maintains proper operations. Use soft, dry cloth to clean the product.



## Device construction and operation

### Control panel and sockets

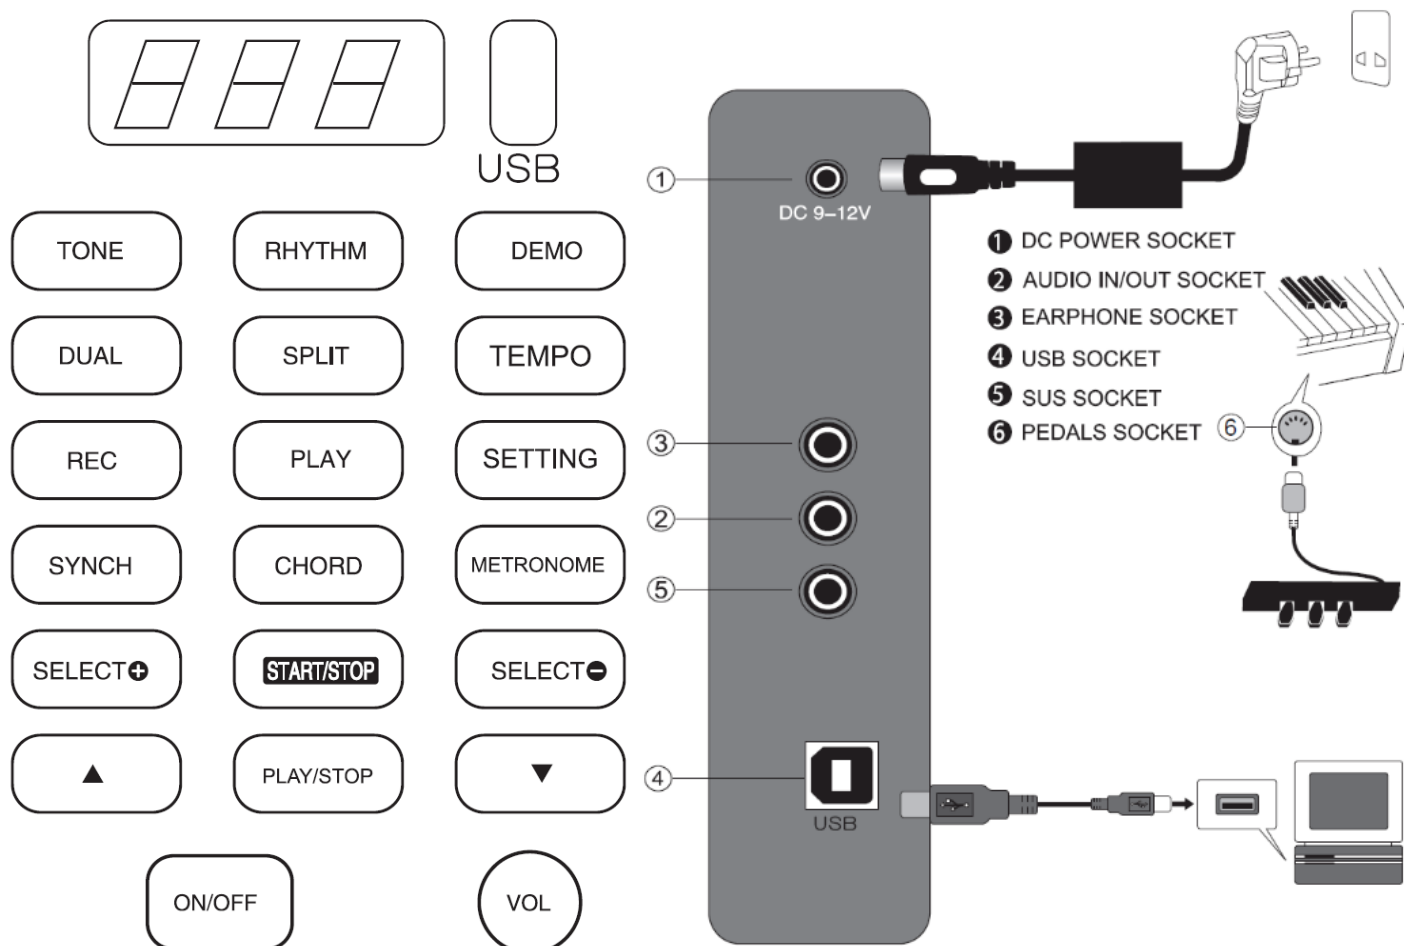

### Performance preparation

- The device requires connection to a power source using a dedicated power cable. Observe caution when connecting the device to a power source.
- The dedicated power adapter shall be used. Connect the output end of the adaptor to the power port, and then the other end to the power socket. The input voltage of the adaptor shall be compatible with the power supply voltage.
- Audio In/Out: firstly, turn off the piano and the external audio devices, secondly, connect one end of the audio cable to the Audio In/Out port, and then connect the other end to the audio input port of the audio devices.
- Headphones connection: When connecting a headphone to the Audio In/Out port, the speaker will be disabled automatically. This way, you can perform without disturbing others. Note! When using a headphones, do not turn up and keep the volume to the maximum for a long time, which may cause hearing loss.

## Basic performance

- Press ON/OFF button, the LED display will turn on and show the value "001"; then you may play the keyboard as required.
- Volume control – use the VOL knob to decrease or increase the volume.
- Tone selection – press the TONE button to enter the tone selection mode; you can select between different tones using the SELECT+ and SELECT- buttons; the default tone is PIANO.
- Rhythm selection – press the RHYTHM button to enter the rhythm selection mode; you can select between rhythms using the SELECT+ and SELECT- buttons; press the START/STOP button to start playing or stop selected rhythm.
- Tempo adjustment – press TEMPO to set the tempo of the rhythm; the tempo can be increased with SELECT+ or decreased with SELECT-; tempo range - 20-280.
- Chord accompaniment – select a rhythm; in rhythm selection mode, press the CHORD button to enter the chord accompaniment mode; play the accompaniment using keys 1-34 from the left; press the CHORD button again to exit the chord accompaniment mode.
- Synchronous start – select the rhythm, tempo and chord accompaniment; in the rhythm selection mode, press the SYNCH button to enter the synchronous start mode; play the chords (using keys 1-34 from the left), and the accompaniment will start playing automatically; press the START/STOP button to turn off the synchro start.
- SETTING – press once to increase/decrease the sensitivity of the keys using the SELECT+ and SELECT- buttons; press twice to increase/decrease (SELECT+/SELECT-) the volume of the rhythm (0-32); press three times to increase/decrease (SELECT+/SELECT-) the pitch shifts (-12 - 12).
- Metronome – press the METRONOME button to enable the metronome function – the LED indicator will light up; press the METRONOME button again to disable the metronome function.
- Playing demonstration songs – press the DEMO button, the system will enter the demo track playing mode; use the SELECT+ and SELECT- buttons to select between each DEMO track; press the DEMO button again to exit the demo track playing mode.
- Recording – press REC button to enter recording mode; press PLAY button to play the recording.
- SPLIT – select a tone; press the SPLIT button in the tone selection mode - use the SELECT+/SELECT- buttons to select another tone - the keyboard has been divided into 2 selected tones; press the SPLIT button again to disable the SPLIT feature.
- DUAL – select a tone; press the DUAL button in the tone selection mode - use the SELECT+/SELECT- buttons to select another tone – the keys now have dual tone; press the DUAL button again to disable the DUAL feature.
- MP3 file playback – place a USB device with an MP3 file in the USB socket; start playback with the PLAY/STOP button; you can select between MP3 files on the device with the up and down arrow buttons.

Tone table

Number	Instrument		
<b>PIANO</b>		029	GUITAR MUTED 1
001	GRAND PIANO 1	030	GUITAR OVRDRV
002	BRIGHT PIANO 1	031	GUITAR DISTRT 1
003	PIANO ELEC	032	GUITAR HRMNX
004	HONKY-TONK	<b>BASS</b>	
005	E PIANO1	033	ACOUSTIC BASS 1
006	E PIANO2	034	FINGER BASS 1
007	GRAND HARPSICHORD	035	ELECT BASS 1
008	CLAVI CHORD 1	036	FRETLB BASS
<b>GLOCK</b>		037	SLAP BASS 1
009	CELESTA	038	SLAP BASS 2
010	GLOCKENSPIEL 1	039	SYN BASS 1
011	MUSIC BOX 1	040	SYN BASS 2
012	VIBRAPHONE 1	<b>STRING</b>	
013	MARIMBA 1	041	VIOLIN 1
014	XYLOPHONE 1	042	VIOLA 1
015	TUBULR BELLS 1	043	CELLO 1
016	DULCIMER 1	044	CONTRABASS 1
<b>ORGAN</b>		045	STR TREM 1
017	HAND ORGAN 1	046	STR PIZZ
018	PERCHY ORGAN 1	047	HARP 1
019	ROCK ORGAN	048	TIMPANI 1
020	CHURCH ORGAN 1	<b>CONCERT</b>	
021	REED ORGAN 1	049	STRINGS 1
022	ACCORDN 1	050	STRINGS 2
023	HARMONICA 1	051	STR SYN 1
024	TANGO ACCORDN 1	052	STR SYN 2
<b>GUITAR</b>		053	CHOIR AAHS 1
025	GUITAR NYLON 1	054	VOICE OOHS 1
026	GUITAR STEEL 1	055	VOICE SYN
027	GUITAR JAZZ 1	056	ORCH HIT 1
028	GUITAR CLEAN 1	<b>BRASS</b>	
		057	TRUMPT 1
		058	TROMBONE 1
		059	TUBA 1
		060	MUTE TPT 1
		061	FR HORN 1
		062	BRASS SECT 1
		063	BRASS SYN 1
		064	BRASS SYN 2
		<b>PIPE</b>	

## Instrukcja obsługi / User Manual

065	SAX SOPRANO	101	BRIGHT FX	138	GRAND PIANO DARK 1	178	HONKY-TONK /W 3
066	SAX ALTO 1	102	GOBLIN FX	139	GRAND PIANO DARK 2	179	HONKY-TONK /W 4
067	SAX TENOR 1	103	ECHO FX	140	VELOCITY CROSS PIANO 1	180	SHORT HONKY-TONK 1
068	SAX BTONE 1	104	SCI-FI FX	141	VELOCITY CROSS PIANO 2	181	SHORT HONKY-TONK 2
069	OBOE 1	FOLK SOUND		142	SOFT GRAND PIANO 1	182	E PIANO 1/W
070	ENG HORN 1	105	SITAR 1	143	SOFT GRAND PIANO 2	183	E PIANO 2/W
071	BASSON 1	106	BANJO 1	144	SOFT GRAND PIANO 3	184	E PIANO 3/W
072	CLARINET 1	107	SHAMISEN 1	145	STEREO BRIGHT PIANO	185	E PIANO 4/W
WOODPIPE		108	KOTO 1	146	BRIGHT PIANO 2	186	E PIANO 5/W
073	PICCOLO 1	109	KALIMBA	147	BRIGHT PIANO 3	187	E PIANO 6/W
074	FLUTE 1	110	BAGPIPE	148	BRIGHT PIANO 4	188	SOFT E.PIANO 1
075	RECORDER 1	111	FIDDLE	149	BRIGHT PIANO 5	189	SOFT E.PIANO 2
076	PAN FLUTE	112	SHANAI	150	BRIGHT PIANO /W 1	190	SOFT E.PIANO 3
077	BOTTLE BLOWN	PERCUSSION		151	BRIGHT PIANO /W 2	191	SOFT E.PIANO 4
078	SHAKHACHI	113	TINKLE BELL	152	SOFT BRIGHT PIANO 1	192	HARD E.PIANO 1
079	WHISTLE 1	114	AGOGO	153	SOFT BRIGHT PIANO 2	193	HARD E.PIANO 2
080	OCARINA	115	STEEL DRM	154	DEEP BRIGHT PIANO	194	SHORT E.PIANO 1
SYNTH PIPE		116	WOODBLK	155	VELOCITY CROSS BRIGHT PIANO	195	SHORT E.PIANO 2
081	SQR WAVE	117	TAIKO DRM	156	DETUNED E.PIANO 1	196	BRIGHTNESS E.P 1
082	SAW TOOTH	118	MLDY TOM	157	DETUNED E.PIANO 2	197	BRIGHTNESS E.P 2
083	CALLIOPE	119	SYNTH DRM	158	DETUNED E.PIANO 3	198	HARPSICHORD 1
084	CHIFF	120	REVRS CYM	159	DETUNED E.PIANO 3	199	HARPSICHORD 2
085	CHARANG	EFFECT		160	BRIGHT E.PIANO 1	200	SOFT HARPSICHORD 1
086	VOICE	121	GTR NOISE	161	BRIGHT E.PIANO 2	201	SOFT HARPSICHORD 2
087	FIFTHS	122	BREATH 1	162	BRIGHT E.PIANO 3	202	BRIGHT HARPSICHORD 1
088	BASS LEAD	123	SEASHORE	163	BRIGHT E.PIANO 4	203	BRIGHT HARPSICHORD 2
SYNTH VOICE		124	BIRD TWEET 1	164	E.PIANO /W 1	204	DARK HARPSICHORD 1
089	NEW AGE	125	TELEPHONE	165	E.PIANO /W 2	205	DARK HARPSICHORD 2
090	WARM PAD	126	HELICOPTER	166	E.PIANO /W 3	206	HARD HARPSICHORD 1
091	POLY SYNTH	127	APPLAUSE	167	E.PIANO /W 4	207	HARD HARPSICHORD 2
092	CHOIR PAD 1	128	GUNSHOT 1	168	DARK E.PIANO 1	208	CLAVI CHORD 2
093	BOW GLASS 1	129	GRAND PIANO2	169	DARK E.PIANO 2	209	CLAVI CHORD 3
094	METAL PAD 1	130	GRAND PIANO3	170	DARK E.PIANO 3	210	CLAVI /W
095	HALO PAD 1	131	GRAND PIANO4	171	DARK E.PIANO 4	211	BRIGHT CLAVI
096	SWEEP	132	GRAND PIANO /W 1	172	SOFT HONKY-TONK 1	212	DARK CLAVI
SYNTH EFFECT		133	GRAND PIANO /W 2	173	SOFT HONKY-TONK 2	213	PERCHY CLAVI
097	RAIN FX	134	GRAND PIANO /W 3	174	VELOCITY CROSS HONKY-TONK	214	BRIGHT CELESTA
098	SNDTRK FX	135	BRIGHTNESS PIANO 1	175	DARK HONKY-TONK 1	215	SHORT CELESTA
099	CRYSTAL FX	136	BRIGHTNESS PIANO 2	176	DARK HONKY-TONK 2	216	PERCHY CELESTA
100	ATMOSPH FX	137	BRIGHTNESS PIANO 3	177	HONKY-TONK /W 1	217	DUET CELESTA

218	CELESTA HARMONIC	259	SANTUR	300	SLOW REED ORGAN	341	FAST TANGO ACCORDN
219	GLOCKENSPIEL 2	260	HAND ORGAN 2	301	SOFT REED ORGAN	342	GUITAR NYLON 2
220	GLOCKENSPIEL 3	261	HAND ORGAN 3	302	HARD REED ORGAN	343	GUITAR NYLON 3
221	GLOCKENSPIEL 4	262	SOFT HAND ORGAN	303	JAZZ REED ORGAN	344	GUITAR NYLON 4
222	BRIGHT GLOCKENSPIEL	263	BRIGHT SOFT HAMND ORGAN	304	ACCORDN 2	345	GUITAR NYLON 5
223	DARK GLOCKENSPIEL	264	HAMND ORGAN DETUNED	305	ACCORDN 3	346	GUITAR NYLON 6
224	GLOCKENSPIEL /W 1	265	PERCHY ORGAN 2	306	ACCORDN 4	347	GUITAR NYLON 7
225	GLOCKENSPIEL /W 2	266	PERCHY ORGAN 3	307	ACCORDN 5	348	GUITAR NYLON RELEASE
226	MUSIC BOX 2	267	BRIGHT PERCHY ORGAN	308	DISTR ACCORDN	349	VELOCITY CROSS RUITAR
227	MUSIC BOX 3	268	DISTR PERCHY ORGAN	309	BRIGHT ACCORDN	350	DETUNED GUITAR NYLON
228	MUSIC BOX 4	269	ROTART ORGAN	310	ACCORDN HARMONIC	351	BIRGHT GUITAR NYLON
229	TOY MUSIC BOX	270	SLOW ROTART ORGAN	311	ROCK ACCORDN	352	DARK GUITAR NYLON
230	BRIGHT MUSIC BOX	271	1960 ROCK ORGAN	312	SWEET ACCORDN	353	GUITAR NYLON HARMONIC 1
231	DARK MUSIC BOX	272	1990 ROCK ORGAN	313	DARK ACCORDN	354	GUITAR NYLON HARMONIC 2
232	VIBRAPHONE 2	273	BRIGHT ROCK ORGAN	314	FAST ACCORDN	355	GUITAR NYLON /W 1
233	VIBRAPHONE 3	274	DARK ROCK ORGAN	315	SLOW ACCORDN	356	GUITAR NYLON /W 2
234	SYN VIBRAPHONE	275	SOFT ROCK ORGAN	316	HARMONICA 2	357	GUITAR NYLON FAST
235	HARD VIBRAPHONE	276	CHURCH ORGAN 2	317	HARMONICA 3	358	GUITAR NYLON SLOW
236	VIBRAPHONE /W 1	277	CHURCH ORGAN 3	318	HARMONICA 4	359	HARD GUITAR NYLON
237	VIBRAPHONE /W 2	278	CHURCH ORGAN 4	319	HARMONICA 5	360	SOFT GUITAR NYLON
238	VIBRAPHONE SOFT	279	CHURCH ORGAN 5	320	SWEET HARMONICA	361	GUITAR STEEL 2
239	MARIMBA 2	280	CHURCH ORGAN 6	321	DISTR HARMONICA	362	GUITAR STEEL 3
240	MARIMBA /W	281	CHURCH ORGAN /W 1	322	SLOW HARMONICA	363	GUITAR STEEL 4
241	DARK MARIMBA	282	CHURCH ORGAN /W 2	323	FAST HARMONICA	364	VELOCITY CROSS GUITAR STEEL
242	BRIGHT MARIMBA	283	BIRGHT CHURCH ORGAN 1	324	BRIGHT HARMONICA	365	DARK GUITAR STEEL
243	DUTED MARIMBA	284	BIRGHT CHURCH ORGAN 2	325	DARK HARMONICA	366	BRIGHT GUITAR STEEL
244	DARK MARIMBA	285	DARK CHURCH ORGAN 1	326	SOFT HARMONICA	367	GUITAR STEEL HARMONIC 1
245	XYLOPHONE 2	286	DARK CHURCH ORGAN 2	327	HARMONICA /W 1	368	GUITAR STEEL HARMONIC 2
246	XYLOPHONE 3	287	SOUL CHURCH ORGAN	328	HARMONICA /W 2	369	HARD GUITAR STEEL
247	VELOCITY CROSS XYLOPHONE	288	CHURCH ORGAN HARMONIC	329	HARMONICA MUTED	370	SOFT GUITAR STEEL
248	DISTR XYLOPHONE	289	CHURCH ORGAN SLOW	330	TANGO ACCORDN 2	371	FAST GUITAR STEEL
249	BRIGHT XYLOPHONE	290	CHURCH ORGAN FAST	331	TANGO ACCORDN 3	372	SLOW GUITAR STEEL
250	FAST XYLOPHONE	291	SOFT CHURCH ORGAN	332	1960 TANGO ACCORDN	373	VELOCITY GUITAR STEEL
251	SLOW XYLOPHONE	292	REED ORGAN 2	333	1980 TANGO ACCORDN	374	GUITAR STEEL REALSE
252	TUBULR BELLS 2	293	REED ORGAN 3	334	BRIGHT TANGO ACCORDN	375	GUITAR STEEL /W 1
253	TUBULR BELLS 3	294	REED ORGAN 4	335	DARK TANGO ACCORDN	376	GUITAR STEEL /W 2
254	TUBULR BELLS 4	295	REED ORGAN 5	336	SOFT TANGO ACCORDN	377	GUITAR JAZZ 2
255	SYN TUBULR BELLS	296	BRIGHT REED ORGAN	337	HARD TANGO ACCORDN	378	GUITAR JAZZ 3
256	TUBULR BELLS DARK	297	DARK REED ORGAN	338	TANGO ACCORDN /W 1	379	GUITAR JAZZ 4
257	DULCIMER 2	298	REED ORGAN /W	339	TANGO ACCORDN /W 2	380	GUITAR JAZZ 5
258	DULCIMER 3	299	FAST REED ORGAN	340	SLOW TANGO ACCORDN		

## Instrukcja obsługi / User Manual

381	DARK GUITAR JAZZ
382	BRIGHT GUITAR JAZZ
383	SOFT GUITAR JAZZ
384	HARD GUITAR JAZZ
385	GUITAR JAZZ VELOCITY
386	GUITAR JAZZ RELEASE
387	GUITAR JAZZ HARMONIC
388	SOFT GUITAR JAZZ
389	GUITAR JAZZ /W 1
390	GUITAR JAZZ /W 2
391	GUITAR CLEAN 2
392	GUITAR CLEAN 3
393	GUITAR CLEAN 4
394	GUITAR CLEAN 5
395	VELOCITY CLEAN GUITAR
396	DUTED CLEAN GUITAR
397	BRIGHT CLEAN GUITAR
398	CLEAN GUITAR HARMONIC
399	CLEAN GUITAR /W 1
400	CLEAN GUITAR /W 2
401	SOFT CLEAN GUITAR
402	FAST CLEAN GUITAR
403	SLOW CLEAN GUITAR
404	CLEAN GUITAR RELEASE
405	GUITAR MUTED 2
406	GUITAR MUTED 3
407	GUITAR MUTED 4
408	GUITAR MUTED 5
409	BRIGHT GUITAR MUTED
410	DARK GUITAR MUTED
411	GUITAR MUTED HARMONIC
412	GUITAR MUTED RELEASE
413	GUITAR MUTED CHORUS
414	GUITAR MUTED HARD
415	GUITAR MUTED SOFT
416	GUITAR MUTED /W 1
417	GUITAR MUTED /W 2
418	GUITAR OVRDRV 2
419	GUITAR OVRDRV 3
420	GUITAR OVRDRV 4
421	FUNK GUITAR

422	GUITAR OVRDRV HARMONIC
423	BRIGHT GUITAR OVRDRV
424	DARK GUITAR OVRDRV
425	GUITAR OVRDRV RELEASE
426	HARD GUITAR OVRDRV
427	SOFT GUITAR OVRDRV
428	GUITAR OVRDRV /W 1
429	GUITAR OVRDRV /W 2
430	GUITAR DISTRT 2
431	GUITAR DISTRT 3
432	GUITAR DISTRT 4
433	GUITAR DISTRT 5
434	GUITAR DISTRT 6
435	GUITAR DISTRT HARMONIC
436	GUITAR DISTRT RELEASE
437	BRIGHT GUITAR DISTRT
438	DARK GUITAR DISTRT
439	SOFT GUITAR DISTRT
440	HARMONIC GUITAR DISTRT
441	HARD GUITAR DISTRT
442	GUITAR DISTRT /W 1
443	GUITAR DISTRT /W 2
444	SOFT GUITAR HRMNX
445	HARD GUITAR HRMNX
446	BRIGHT GUITAR HRMNX
447	DARK GUITAR HRMNX
448	FAST GUITAR HRMNX
449	SLOW GUITAR HRMNX
450	GUITAR HRMNX RELEASE
451	GUITAR HRMNX /W 1
452	GUITAR HRMNX /W 2
453	ACOUSTIC BASS 2
454	ACOUSTIC BASS 3
455	ACOUSTIC BASS 4
456	ACOUSTIC BASS 5
457	DETUNED BASS
458	BASS AND FILTER
459	SOFT BASS
460	BASS & RELEASE
461	FAST BASS
462	SLOW BASS

463	BRIGHT BASS
464	DARK BASS
465	BASS /W 1
466	BASS /W 2
467	FINGER BASS 2
468	FINGER BASS HARMONIC
469	SOFT FINGER BASS
470	FINGER BASS RELEASE
471	ELECT BASS 2
472	ELECT BASS 3
473	ELECT BASS 4
474	ELECT BASS 5
475	ELECT BASS 6
476	ELECT BASS RELEASE
477	ELECT BASS HARMONIC
478	SOFT ELECT BASS
479	FAST ELECT BASS
480	PICK BASS
481	BRIGHT ELECT BASS 1
482	BRIGHT ELECT BASS 2
483	DARK ELECT BASS 1
484	DARK ELECT BASS 2
485	SOFT FRETLS BASS
486	FAST FRETLS BASS
487	FRETLS BASS RELEASE
488	FRETLS BASS HARMONIC
489	FRETLESS BASS
490	FAST FRETLESS BASS
491	SLAP BASS 3
492	SLAP BASS 4
493	SLAP BASS 5
494	SLAP BASS 6
495	BRIGHT SLAP BASS 1
496	BRIGHT SLAP BASS 2
497	DARK SLAP BASS 1
498	DARK SLAP BASS 2
499	SOFT SLAP BASS 1
500	SOFT SLAP BASS 2
501	FAST SLAP BASS 1
502	FAST SLAP BASS 2
503	SLOW SLAP BASS 1

504	SLOW SLAP BASS 2
505	SLAP BASS HARMONIC 1
506	SLAP BASS HARMONIC 2
507	SLAP BASS RELEASE 1
508	SLAP BASS RELEASE 2
509	SYN BASS 3
510	SYN BASS 4
511	SYN BASS 5
512	SYN BASS 6
513	SYN BASS HARMONIC 1
514	SYN BASS HARMONIC 2
515	FAST SYN BASS 1
516	FAST SYN BASS 2
517	SOFT SYN BASS 1
518	SOFT SYN BASS 2
519	SLOW SYN BASS 1
520	SLOW SYN BASS 2
521	FAST SYN BASS 1
522	FAST SYN BASS 2
523	BRIGHT SYN BASS 1
524	BRIGHT SYN BASS 2
525	DARK SYN BASS 1
526	DARK SYN BASS 2
527	SYN BASS RELEASE 1
528	SYN BASS RELEASE 2
529	VIOLIN 2
530	VIOLIN 3
531	VIOLIN 4
532	VIOLIN 5
533	VIOLIN ENSEMBLE 1
534	VIOLIN ENSEMBLE 2
535	SLOW VIOLIN
536	FAST VOLIN
537	VOLIN /W
538	BRIGHT VOLIN
539	DARK VOLIN
540	SOFT VOLIN
541	VIOLA 2
542	VIOLA 3
543	VIOLA 4
544	DARK VIOLA

545	HARD VIOLA
546	VIOLA ENSEMBLE
547	SLOW VIOLA
548	VIOLA VIBRATO
549	VIOLA /W
550	BRIGHT VIOLA
551	FAST VIOLA
552	SOFT VIOLA
553	CELLO 2
554	CELLO 3
555	CELLO 4
556	DARK CELLO
557	HARD CELLO
558	CELLO ENSEMBLE 1
559	CELLO ENSEMBLE 2
560	SLOW CELLO
561	FAST CELLO
562	CELLO /W
563	BRIGHT CELLO
564	SOFT CELLO
565	CONTRABASS 2
566	CONTRABASS 3
567	CONTRABASS 4
568	CONTRA BASS ENSEMBLE 1
569	CONTRA BASS ENSEMBLE 2
570	CONTRA BASS ENSEMBLE 3
571	CONTRA BASS ENSEMBLE 4
572	DARK CONTRA BASS
573	CONTRA BASS VIBRATO
574	STR. TREM 2
575	STR. TREM 3
576	STR. TREM 4
577	STR. TREM SLOW
578	STR. TREM FAST
579	STR. TREM /W
580	BRIGHT STR. TREM
581	DARK STR. TREM
582	SOFT STR. TREM
583	BRIGHT STR. PIZZ
584	DARK STR. PIZZ
585	STR. PIZZ HARMONIC

586	STR. PIZZ /W
587	FAST STR. PIZZ
588	SLOW STR. PIZZ
589	SOFT STR. PIZZ
590	METAL STR. PIZZ
591	HARP 2
592	HARP 3
593	HARP 4
594	HARP /W 1
595	HARP /W 2
596	BRIGHT HARP 1
597	BRIGHT HARP 2
598	DARK HARP 1
599	DARK HARP 2
600	HARP HARMONIC
601	SOFT HARMONIC
602	TIMPANI 2
603	TIMPANI 3
604	TIMPANI 4
605	TIMPANI /W 1
606	TIMPANI /W 2
607	BRIGHT TIMPANI
608	DARK TIMPANI
609	STRINGS 3
610	STRINGS 4
611	STRINGS 5
612	STRINGS 6
613	SLOW STRINGS 1
614	SLOW STRINGS 2
615	FAST STRINGS 1
616	FAST STRINGS 2
617	DARK STINGS 1
618	DARK STINGS 2
619	BRIGHT STINGS 1
620	BRIGHT STINGS 2
621	RESONANT STRINGS
622	SPORZATO STRINGS
623	STR. SYN 3
624	STR. SYN 4
625	STR. SYN 5
626	STR. SYN 6

627	1960 STRINGS
628	1970 STRINGS
629	SLOW STRINGS 1
630	SLOW STRINGS 2
631	FAST STRINGS 1
632	FAST STRINGS 2
633	LEGATO STRINGS 1
634	LEGATO STRINGS 2
635	BRIGHT LEGATO STRINGS
636	DARK LEGATO STRINGS
637	CHOIR AAHS 2
638	CHOIR AAHS 3
639	CHOIR AAHS 4
640	CHOIR AAHS 5
641	WARM CHOIR AAHS
642	CHOIR AAHS /W 1
643	CHOIR AAHS /W 2
644	CHOIR AAHS HARMONIC
645	BRIGHT CHOIR AAHS
646	DARK CHOIR AAHS
647	FAST CHOIR AAHS
648	SLOW CHOIR AAHS
649	VOICE OOHIS 2
650	WARM VOICE OOHIS 1
651	WARM VOICE OOHIS 2
652	VOICE OOHIS /W
653	BRIGHT VOICE OOHIS
654	DARK VOICE OOHIS
655	FAST VOICE OOHIS
656	SLOW VOICE OOHIS
657	VOICE SYN HARMONIC
658	SLOW VOICE SYN
659	FAST VOICE SYN
660	BRIGHT VOICE SYN
661	ELE VOICE SYN
662	ORCH HIT 2
663	ORCH HIT /W
664	BRIGHT ORCH HIT
665	ORCH HIT HARMONIC
666	SLOW ORCH HIT
667	FAST ORCH HIT

668	DARK ORCH HIT
669	SOFT ORCH HIT
670	TRUMPT 2
671	TRUMPT 3
672	TRUMPT 4
673	TRUMPT 5
674	TRUMPT 6
675	TRUMPT 7
676	DARK TRUMPT
677	BRIGHT TRUMPT
678	SWEET TRUMPT
679	MUTE TRUMPT
680	TRUMPT /W 1
681	TRUMPT /W 2
682	TROMBONE 2
683	TROMBONE 3
684	TROMBONE 4
685	TROMBONE 5
686	TROMBONE 6
687	TROMBONE 7
688	DARK TROMBONE
689	BRIGHT TROMBONE
690	SLOW BRIGHT TROMBONE
691	MUTE TROMBONE
692	TROMBONE /W
693	TUBA 2
694	TUBA 3
695	TUBA 4
696	TUBA 5
697	TUBA 6
698	SOFT TUBA
699	SLOW TUBA
700	TUBA SOLO
701	TUBA /W
702	BRIGHT TUBA
703	DARK TUBA
704	MUTE TUBA
705	MUTE TPT 2
706	DARK MUTE TPT
707	BRIGHT MUTE TPT
708	MUTE TPT /W

## Instrukcja obsługi / User Manual

709	SWEET MUTE TPT	750	SAX ALTO 6	791	ANALOG ENG HORN	832	PAN FLUTE FAST
710	FR HORN 2	751	SAX ALTO BRIGHT	792	WOODWINDS	833	PAN FLUTE HARMONIC
711	FR HORN 3	752	SAX ALTO MUTE	793	BASSON 2	834	PAN FLUTE DUTE
712	FR HORN 4	753	SAX ALTO /W	794	BASSON 3	835	PAN FLUTE/W
713	FR HORN 5	754	SOFT SAX ALTO	795	BASSON 4	836	BRIGHT PAN FLUTE
714	FR HORN 6	755	SLOW SAX ALTO	796	BASSON 5	837	BOTTLE BLOWN DARK
715	SWEET FR HORN	756	SWEET SAX ALTO	797	BRIGHT BASSON	838	BOTTLE BLOWN BRIGHTNESS
716	SLOW FR HORN	757	SAX TENOR 2	798	DARK BASSON	839	BOTTLE BLOWN WARM
717	FAST FR HORN	758	SAX TENOR 3	799	BASSON WELL	840	SOFT BOTTLE BLOWN
718	BRIGHT FR HORN	759	SAX TENOR 4	800	BRIGHT BASSON	841	SHAKHACHI HARMONIC
719	DARK FR HORN	760	SAX TENOR 5	801	MUTE BASSON	842	SHAKHACHI BRIGHT
720	BRASS SECT 2	761	SAX TENOR 6	802	SOFT BASSON	843	SHAKHACHI DARK
721	BRASS SECT 3	762	SWEET SAX TENOR	803	CLARINET 2	844	SLOW SHAKHACHI
722	BRASS SECT 4	763	DARK SAX TENOR	804	CLARINET 3	845	FAST SHAKHACHI
723	BRASS SECT 5	764	SUPER SAX TENOR	805	CLARINET 4	846	WHISTLE 2
724	BRASS SECT 6	765	SAX TENOR /W 1	806	CLARINET 5	847	WHISTLE 3
725	DARK BRASS SECT	766	SAX TENOR /W 2	807	CLARINET HARMONIC	848	WHISTLE 4
726	BRASS SECT WELL	767	SAX TENOR HARMONIC	808	DARK CLARINET	849	WHISTLE 5
727	BRIGHT BRASS SECT	768	SAX TENOR BRIGHT	809	BRIGHT CLARINET	850	SQUARE
728	FAST BRASS SECT	769	SAX BTONE 2	810	CLARINET WELL	851	SINE LEAD
729	SLOW BRASS SECT	770	SAX BTONE 3	811	CLARINET MUTE	852	SINE SLOW
730	BRASS SECT /W	771	SAX BTONE 4	812	CLARINET SOFT	853	SINE FAST
731	BRASS SYN 3	772	SAX BTONE 5	813	PICCOLO 2	854	SAW SLOW
732	BRASS SYN 4	773	SAX BTONE WELL	814	PICCOLO 3	855	SAW FAST
733	BRASS SYN 5	774	MUTE SAX BTONE	815	PICCOLO 4	856	SAW HARMONIC
734	BRASS SYN 6	775	SWEET SAX BTONE	816	PICCOLO DARK	857	VOICE LEAD
735	BRASS SYN 7	776	DARK SAX BTONE	817	PICCOLO HARMONIC	858	VOICE SLOW
736	SOFT BRASS SYN	777	OBOE 2	818	BRIGHT PICCOLO	859	VOICE FAST
737	SFORZATO BRASS SYN	778	OBOE 3	819	SOFT PICCOLO	860	SOFT STH LEAD
738	DARK BRASS SYN	779	OBOE 4	820	FLUTE 2	861	STH LEAD
739	BRIGHT BRASS SYN	780	OBOE 5	821	FLUTE 3	862	MASSINESS
740	WELL BRASS SYN	781	SWEET OBOE	822	FLUTE 4	863	BASS & LEAD
741	MUTE BRASS SYN	782	OBOE WELL	823	FLUTE HARMONIC	864	NEW AGE SLOW
742	SWEET BRASS SYN	783	BRIGHT OBOE	824	DARK FLUTE	865	NEW AGE FAST
743	HOMONIC BRASS SYN	784	DARK OBOE	825	BRIGHT FLUTE	866	NEW AGE HARMONIC
744	SLOW BRASS SYN	785	MUTE OBOE	826	FLUTE MUTE	867	WARM PAD FAST
745	FAST BRASS SYN	786	ENG HORN 2	827	SOFT FLUTE	868	WARM PAD SLOW
746	SAX ALTO 2	787	ENG HORN 3	828	RECORDER 2	869	WARM PAD HARMONIC
747	SAX ALTO 3	788	ENG HORN 4	829	RECORDER 3	870	PWM PAD
748	SAX ALTO 4	789	ENG HORN 5	830	RECORDER 4	871	POLY SYNTH SLOW
749	SAX ALTO 5	790	ENG HORN 6	831	PAN FLUTE SLOW	872	POLY SYNTH FAST

873	CLICK PAD
874	ANALOG PAD
875	POLY PAD
876	CHOIR PAD 2
877	CHOID PAD HARMONIC
878	BOW GLASS 2
879	BOW GLASS HARMONIC
880	METAL PAD 2
881	PAN PAD 1
882	PAN PAD 2
883	HALO PAD 2
884	HALO PAD 3
885	DISPERSE
886	RISING
887	CONGREGATE
888	PROGENITOR
889	PRELUDE
890	WARM AIR
891	SMOG
892	PAN ECHO
893	LARGE PAN
894	ECHO SLOW
895	FANTASYLAND
896	SITAR 2
897	SITAR 3
898	SITAR 4
899	DISTRIT SITAR
900	BRIGHT SITAR

## Rhythm table

	Number	Instrument	
8 BEAT	001	8 Beat 1A	
	002	8 Beat 2A	
	003	8 Beat 3A	
	004	8 Beat 4A	
	005	8 Beat HeatA	
	006	8 Beat Pop 1A	
	007	8 Beat Pop 2A	
	BALLAD	008	Ballad 1A
		009	Ballad 2A
	010	Guitar BalladA	
	011	Organ BalladA	
	012	Bluse BalladA	
	013	Epic BalladA	
	014	Rock BalladA	
	015	Slow BalladA	
	016	Pop Ballad	
	017	Electro Pop BalladA	
	018	Polk BalladA	
	16 BEAT	019	16 Beat 1A
020		16 Beat 2A	
	021	16 Beat 3A	
	022	16 Beat 4A	
	023	16 Beat FunkA	
	024	16 Beat Pop A	
	025	16 Beat BalladA	
	LATIN	026	Bossa Nova 1A
027		Guitar BossaA	
	028	Pop BossaA	
	029	TangoA	
	030	Cha ChaA	
	031	RhumbaA	
	032	TEX TEXA	
	COUNTRY	033	CountryA
034		Country RockA	
	035	Country ShuffleA	
	036	Country SwingA	
	037	Country BalladA	
	038	Country WaltzA	
	ROCK R&B	039	50's RockA
040		Heavy MetalA	
	041	Rock 1A	
	042	Rock 2A	
	043	Soft RockA	
	044	Slow RockA	

	045	Hard RockA		092	TarantellaA	
	046	Rock & Roll 1A		093	Slow WaltzA	
	047	Rock & Roll 2A		094	Ober WaltzA	
RHYTHM&BLUES	048	Chicago BluesA	PINIST	095	Piano BalladA	
	049	Fast GospelA		096	Waltz 2A	
	050	Groove SoulA		097	Guitar WaltzA	
	051	RapA		098	2/4 Piano 1A	
	052	GospelS1A		099	3/4 Piano 1A	
	053	BluesA		100	4/4 Piano 1A	
	054	Slow BluesA		8 BEAT	101	8 Beat 1B
	055	FoxtrotA		102	8 Beat 2B	
	Disco	056		Disco TropicA	103	8 Beat 3B
	057	Disco HandsA		104	8 Beat 4B	
	058	Two StepA		105	8 Beat HeatB	
	059	Polk PopA		106	8 Beat Pop 1B	
	060	Waltz 1A		107	8 Beat Pop 2B	
	061	Waltz Pop 1A		BALLAD	108	Ballad 1B
	062	Waltz Pop 2A		109	Ballad 2B	
	WORLD MUSIC	063		RaiA	110	Guitar BalladB
	064	Twist 1A		111	Organ BalladB	
	065	Twist 2A		112	Bluse BalladB	
	066	Miami PopA		113	Epic BalladB	
	067	MotownA		114	Rock BalladB	
	068	ReggaeA		115	Slow BalladB	
	069	Swing ReggaeA		116	Pop BalladB	
	070	MerboA		117	Electro Pop BalladB	
	071	BeguineA		118	Polk BalladB	
	072	MusetteA		16 BEAT	119	16 Beat 1B
	DANCE	073		HouseA	120	16 Beat 2B
	074	Slow FoxA		121	16 Beat 3B	
	075	Vienna WaltzA		122	16 Beat 4B	
	076	SalsaA		123	16 Beat FunkB	
	077	DiscoA		124	16 Beat Pop B	
	078	Hip Hop PopA		125	16 Beat BalladB	
079	Analog PopA	LATIN	126	Bossa Nova 1B		
080	Club DanceA	127	Guitar BossaB			
JAZZ&SWING	081	BoogieA	128	Pop BossaB		
082	Funky PopA	129	TangoB			
	083	Jazz RockA		130	Cha ChaB	
	084	Swing 1A		131	RhumbaB	
	085	DixielandA		132	TEX TEXTB	
	086	Jazz SambaA		COUNTRY	133	CountryB
	TRADITIONAL	087		MarchA	134	Country RockB
	088	US. MarchA		135	Country ShuffleB	
	089	Samba A		136	Country SwingB	
	090	PolkaA		137	Country BalladB	
	091	Polka OberA		138	Country WaltzB	

Instrukcja obsługi / User Manual

ROCK R&B	139	50's RockB		186	Jazz SambaB
	140	Heavy MetalB	TRADITIONAL	187	MarchB
	141	Rock 1B		188	US MarchB
	142	Rock 2B		189	SambaB
	143	Soft RockB		190	PolkaB
	144	Slow RockB		191	Polka OberB
	145	Hard RockB		192	TarantellaB
	146	Rock & Roll 1B		193	Slow WaltzB
	147	Rock & Roll 2B		194	Other WaltzB
RHYTHM&BLUES	148	Chicago BluesB	PINIST	195	Piano BalladB
	149	Fast GospelB		196	Waltz 2B
	150	Groove SoulB		197	Guitar WaltzB
	151	RapB		198	2/4 Piano 1B
	152	GospelS1B		199	3/4 Piano 1B
	153	BluesB		200	4/4 Piano 1B
	154	Slow BluesB	8 BEAT	201	8 Beat 1I
	155	FoxtrotB		202	8 Beat 2I
Disco	156	Disco TropicB		203	8 Beat 3I
	157	Disco HandsB		204	8 Beat 4I
	158	Two StepB		205	8 Beat HeatI
	159	Polk PopB		206	8 Beat Pop 1I
	160	Waltz 1B		207	8 Beat Pop 2I
	161	Waltz Pop 1B	BALLAD	208	Ballad 1I
	162	Waltz Pop 2B		209	Ballad 2I
WORLD MUSIC	163	RaiB		210	Guitar BalladI
	164	Twist 1B		211	Organ BalladI
	165	Twist 2B		212	Bluse BalladI
	166	Miami PopB		213	Epic BalladI
	167	MotownB		214	Rock BalladI
	168	ReggaeB		215	Slow BalladI
	169	Spring ReggaeB		216	Pop BalladI
	170	MamboB		217	Electro Pop BalladI
	171	BeguineB	16 BEAT	218	Polk BalladI
	172	MusetteB		219	16 Beat 1I
DANCE	173	HouseB		220	16 Beat 2I
	174	Slow FoxB		221	16 Beat 3I
	175	Vienna WaltzB		222	16 Beat 4I
	176	SalsaB		223	16 Beat FunkI
	177	DiscoB		224	16 Beat Pop 1I
	178	Hip Hop PopB		225	16 Beat BalladI
	179	Analog PopB	LATIN	226	Bossa Nova 1I
	180	Club DanceB		227	Guitar BossaI
JAZZ&SWING	181	BoogieB		228	Pop BossaI
	182	Funky PopB		229	TangoI
	183	Jazz RockB		230	Cha ChaI
	184	Swing 1B		231	RhumbaI
	185	DixielandB		232	TEX TEXI

COUNTRY	233	CountryI		280	Club DanceI
	234	Country RockI	JAZZ&SWING	281	BoogieI
	235	Country ShuffleI		282	Funky PopI
	236	Country SwingI		283	Jazz RockI
	237	Country BalladI		284	Swing 1I
	238	Country WaltzI		285	DixielandI
ROCK R&B	239	50's RockI	TRADITIONAL	286	Jazz SambaI
	240	Heavy MetalI		287	MarchI
	241	Rock 1I		288	US MarchI
	242	Rock 2I		289	SambaI
	243	Soft RockI		290	PolkaI
	244	Slow RockI		291	Polka OberI
	245	Hard RockI		292	TarantellaI
	246	Rock & Roll 1I		293	Slow WaltzI
	247	Rock & Roll 2I		294	Other WaltzI
RHYTHM&BLUES	248	Chicago BluesI	PINIST	295	Piano BalladI
	249	Fast GospelI		296	Waltz 2I
	250	Groove SoulI		297	Guitar WaltzI
	251	RapI		298	2/4 Piano 1I
	252	GospelS1I		299	3/4 Piano 1I
	253	BluesI		300	4/4 Piano 1I
	254	Slow BluesI	8 BEAT	301	8 Beat 1E
	255	FoxtrotI		302	8 Beat 2E
Disco	256	Disco TropicI		303	8 Beat 3E
	257	Disco HandsI		304	8 Beat 4E
	258	Two StepI		305	8 Beat HeatE
	259	Polk PopI		306	8 Beat Pop 1E
	260	Waltz 1I		307	8 Beat Pop 2E
	261	Waltz Pop 1I	BALLAD	308	Ballad 1E
	262	Waltz Pop 2I		309	Ballad 2E
WORLD MUSIC	263	RaiI		310	Guitar BalladE
	264	Twist 1I		311	Organ BalladE
	265	Twist 2I		312	Bluse BalladE
	266	Miami PopI		313	Epic BalladE
	267	MotownI		314	Rock BalladE
	268	ReggaeI		315	Slow BalladE
	269	Swing ReggaeI		316	Pop BalladE
	270	MamboI		317	Electro Pop BalladE
	271	BeguineI		318	Polk BalladE
	272	MusetteI	16 BEAT	319	16 Beat 1E
DANCE	273	HouseI		320	16 Beat 2E
	274	Slow FoxI		321	16 Beat 3E
	275	Vienna WaltzI		322	16 Beat 4E
	276	SalsaI		323	16 Beat FunkE
	277	DiscoI		324	16 Beat Pop E
	278	Hip Hop PopI		325	16 Beat BalladE
	279	Analog PopI	LATIN	326	Bossa Nova 1E

LATIN	327	Guitar BossaB		374	Slow FoxE
	328	Pop BossaB	DANCE MUSIC	375	Vienna WaltzE
	329	TangoB		376	SalsaE
	330	Cha ChaE		377	DiscoE
	331	RhumbaE		378	Hip Hop PopE
	332	TEX TEXE		379	Analog PopE
COUNTRY	333	CountryE		380	Club DanceE
	334	Country RockE	JAZZ&SWING	381	BoogieE
	335	Country ShuffleE		382	Funky PopE
	336	Country SwingE		383	Jazz RockE
	337	Country BalladE		384	Swing 1E
	338	Country WaltzE		385	DixielandE
ROCK R&B	339	50's RockE	TRADITIONAL	386	Jazz SambaE
	340	Heavy MetalE		387	MarchE
	341	Rock 1E		388	US MarchE
	342	Rock 2E		389	SambaE
	343	Soft RockE		390	PolkaE
	344	Slow RockE		391	Polka OberE
	345	Hard RockE		392	TarantellaE
	346	Rock & Roll 1E		393	Slow WaltzE
	347	Rock & Roll 2E		394	Other WaltzE
RHYTHM&BLUES	348	Chicago BluesE	PINIST	395	Piano BalladE
	349	Fast GospelE		396	Waltz 2E
	350	Groove SoulE		397	Guitar WaltzE
	351	RapE		398	2/4 Piano 1E
	352	GospelS1E		399	3/4 Piano 1E
	353	BluesE		400	4/4 Piano 1E
	354	Slow BluesE	8 BEAT	401	8 Beat 1AF
	355	FoxtrotE		402	8 Beat 2AF
Disco	356	Disco TropicE		403	8 Beat 3AF
	357	Disco HandsE		404	8 Beat 4AF
	358	Two StepE		405	8 Beat HeatAF
	359	Polk PopE		406	8 Beat Pop 1AF
	360	Waltz 1E		407	8 Beat Pop 2AF
	361	Waltz Pop 1E	BALLAD	408	Ballad 1AF
	362	Waltz Pop 2E		409	Ballad 2AF
WORLD MUSIC	363	RaiE		410	Guitar BalladAF
	364	Twist 1E		411	Organ BalladAF
	365	Twist 2E		412	Bluse BalladAF
	366	Miami PopE		413	Epic BalladAF
	367	MotownE		414	Rock BalladAF
	368	ReggaeE		415	Slow BalladAF
	369	Spring ReggaeE		416	Pop BalladAF
	370	MamboE		417	Electro Pop BalladAF
	371	BeguineE		418	Polk BalladAF
	372	MusetteE	16 BEAT	419	16 Beat 1AF
	373	HouseE		420	16 Beat 2AF

	421	16 Beat 3AF		468	ReggaeAF
	422	16 Beat 4AF		469	Swing ReggaeAF
	423	16 Beat FunkAF		470	MamboAF
	424	16 Beat Pop AF	DANCE	471	BeguineAF
LATIN	425	16 Beat BalladAF		472	MusetteAF
	426	Bossa Nova 1AF		473	HouseAF
	427	Guitar BossaAF		474	Slow FoxAF
	428	Pop BossaAF		475	Vienna WaltzAF
	429	TangoAF		476	SalsaAF
	430	Cha ChaAF		477	DiscoAF
	431	RhumbaAF		478	Hip Hop PopAF
	432	TEX TEXAF		479	Analog PopAF
COUNTRY	433	CountryAF	JAZZ&SWING	480	Club DanceAF
	434	Country RockAF		481	BoogieAF
	435	Country ShuffleAF		482	Funky PopAF
	436	Country SwingAF		483	Jazz RockAF
	437	Country BalladAF		484	Swing 1AF
	438	Country WaltzAF		485	DixielandAF
ROCK R&B	439	50's RockAF	TRADITIONAL	486	Jazz SambaAF
	440	Heavy MetalAF		487	MarchAF
	441	Rock 1AF		488	US MarchAF
	442	Rock 2AF		489	SambaAF
	443	Soft RockAF		490	PolkaAF
	444	Slow RockAF		491	Polka OberAF
	445	Hard RockAF		492	TarantellaAF
	446	Rock & Roll 1AF		493	Slow WaltzAF
	447	Rock & Roll 2AF		494	Other WaltzAF
RHYTHM&BLUES	448	Chicago BluesAF	PINIST	495	Piano BalladAF
	449	Fast GospelAF		496	Waltz 2AF
	450	Groove SoulAF		497	Guitar WaltzAF
	451	RapAF		498	2/4 Piano 1AF
	452	GospelS1AF		499	3/4 Piano 1AF
	453	BluesAF		500	4/4 Piano 1AF
	454	Slow BluesAF	8 BEAT	501	8 Beat 1BF
	455	FoxtrotAF		502	8 Beat 2BF
Disco	456	Disco TropicAF		503	8 Beat 3BF
	457	Disco HandsAF		504	8 Beat 4BF
	458	Two StepAF		505	8 Beat HeatBF
	459	Polk PopAF		506	8 Beat Pop 1BF
	460	Waltz 1AF		507	8 Beat Pop 2BF
	461	Waltz Pop 1AF	BALLAD	508	Ballad 1BF
	462	Waltz Pop 2AF		509	Ballad 2BF
WORLD MUSIC	463	RaiAF		510	Guitar BalladBF
	464	Twist 1AF		511	Organ BalladBF
	465	Twist 2AF		512	Bluse BalladBF
	466	Miami PopAF		513	Epic BalladBF
	467	MotownAF		514	Rock BalladBF



## Instrukcja obsługi / User Manual

	515	Slow BalladBF		562	Waltz Pop 2BF		609	Ballad 2C		656	Disco TropicC
	516	Pop BalladBF		563	RaiBF		610	Guitar BalladC		657	Disco HandsC
	517	Electro Pop BalladBF	<b>WORLD MUSIC</b>	564	Twist 1BF		611	Organ BalladC		658	Two StepC
	518	Polk BalladBF		565	Twist 2BF		612	Bluse BalladC		659	Polk PopC
<b>16 BEAT</b>	519	16 Beat 1BF		566	Miami PopBF		613	Epic BalladC	<b>DANCE</b>	660	Waltz 1C
	520	16 Beat 2BF		567	WorowBF		614	Rock BalladC		661	Waltz Pop 1C
	521	16 Beat 3BF		568	ReggaeBF		615	Slow BalladC		662	Waltz Pop 2C
	522	16 Beat 4BF		569	Swing ReggaeBF		616	Pop BalladC		663	RaiC
	523	16 Beat FunkBF		570	MamboBF		617	Electro Pop Ballad		664	Twist 1C
	524	16 Beat Pop BF		571	BeguineBF		618	Polk BalladC		665	Twist 2C
	525	16 Beat BalladBF		572	MusetteBF		619	16 Beat 1C		666	Miami PopC
<b>LATIN</b>	526	Bossa Nova 1BF	<b>DANCE</b>	573	HouseBF		620	16 Beat 2C		667	NotornC
	527	Guitar BossaBF		574	Slow FoxBF		621	16 Beat 3C		668	ReggaeC
	528	Pop BossaBF		575	Vienna WaltzBF		622	16 Beat 4C		669	Swing ReggaeC
	529	TangoBF		576	SalsaBF		623	16 Beat PunkC		670	MamboC
	530	Cha ChaBF		577	DiscoBF		624	16 Beat Pop C		671	BeguineC
	531	RhumbaBF		578	Hip Hop PopBF		625	16 Beat BalladC		672	MusetteC
	532	TEX TEXBF		579	Analog PopBF		626	Bossa Nova 1C		673	HouseC
<b>COUNTRY</b>	533	CountryBF		580	Club DanceBF		627	Guitar BossaC		674	Slow FoxC
	534	Country RockBF	<b>JAZZSWING</b>	581	BoogieBF		628	Pop BossaC		675	Vienna WaltzC
	535	Country ShuffleBF		582	Funky PopBF		629	TangoC		676	SalsaC
	536	Country SwingBF		583	Jazz RockBF		630	Cha ChaC		677	DiscoC
	537	Country BalladBF		584	Swing 1BF		631	RhumbaC		678	Hip Hop PopC
	538	Country WaltzBF		585	DixielandBF		632	TRX TRXC		679	Analog PopC
<b>ROCK RAP</b>	539	50's RockBF		586	Jazz SambaBF		633	CountryC		680	Club DanceC
	540	Heavy MetalBF	<b>TRADITIONAL</b>	587	MarchBF		634	Country RockC		681	BoogieC
	541	Rock 1BF		588	US MarchBF		635	Country ShuffleC		682	Funky PopC
	542	Rock 2BF		589	SambaBF		636	Country SwingC		683	Jazz RockC
	543	Soft RockBF		590	PolkaBF		637	Country BalladC		684	Swing 1C
	544	Slow RockBF		591	Polka OberBF		638	Country WaltzC		685	DixielandC
	545	Hard RockBF		592	TarantellaBF		639	50's RockC		686	Jazz SambaC
	546	Rock & Roll 1BF		593	Slow WaltzBF		640	Heavy MetalC		687	MarchC
	547	Rock & Roll 2BF		594	Ober WaltzBF		641	Rock 1C		688	US MarchC
<b>RHYTHM&amp;BLUES</b>	548	Chicago BluesBF	<b>PINIST</b>	595	Piano BalladBF		642	Rock 2C		689	SambaC
	549	Fast GospelBF		596	Waltz 2BF		643	Soft RockC		690	PolkaC
	550	Groove SoulBF		597	Guitar WaltzBF		644	Slow RockC		691	Polka OberC
	551	RapBF		598	2/4 Piano 1BF		645	Hard RockC		692	TarantellaC
	552	GospelS1BF		599	3/4 Piano 1BF		646	Rock & Roll 1C	<b>JAZZSWING</b>	693	Slow WaltzC
	553	BluesBF		600	4/4 Piano 1BF		647	Rock & Roll 2C		694	Ober WaltzC
	554	Slow BluesBF	<b>8 BEAT</b>	601	8 Beat 1C		648	Chicago BluesC		695	Piano BalladC
	555	FoxtrotBF		602	8 Beat 2C		649	Fast GospelC		696	Waltz 2C
<b>Disco</b>	556	Disco TropicBF		603	8 Beat 3C		650	Groove SoulC		697	Guitar WaltzC
	557	Disco HandsBF		604	8 Beat 4C		651	RapC		698	2/4 Piano 1C
	558	Two StepBF		605	8 Beat Hea1C		652	GospelS1C		699	3/4 Piano 1C
	559	Polk PopBF		606	8 Beat Pop 1C		653	BluesC		700	4/4 Piano 1C
	560	Waltz 1BF		607	8 Beat Pop 2C		654	Slow BluesC			
	561	Waltz Pop 1BF		608	Ballad 1C		655	FoxtrotC			

## Demo table

NO	SongName	029	HapyBirh	058	SingKite	087	Beyer 90
001	MinutWlz	030	PraiseSng	059	TongChil	088	Beyer 98
002	DJ Dance	031	Dolly	060	DoReMi	089	Beyer 99
003	Fountain	032	Market	061	We Happy	090	Beyer 26
004	SpanGirl	033	Family	062	LittlBee	091	Beyer 27
005	SonataPn	034	A cradle	063	Russia	092	Beyer 28
006	SuperSng	035	At Home	064	Plaster	093	Beyer 29
007	LittlBee	036	Seasons	065	Foison	094	Beyer 31
008	HorseRac	037	YearsAgo	066	JingleBe	095	Beyer 106
009	Nocturne	038	Pigeons	067	PaperBoy	096	Beyer 48
010	TheSpain	039	InnerVic	068	Swallow	097	Beyer 52
011	BusyTran	040	Violin	069	New Year	098	Beyer 107
012	Mexico	041	Swan	070	Edelweis	099	Beyer 18
013	MozartPn	042	Musettes	071	MoonRivr	100	Beyer 21
014	Minuet	043	GypsyRnd	072	Beyer 10	101	Beyer 23
015	Nifuma	044	Serenade	073	Beyer 20	102	Beyer 25
016	Disco	045	Polka	074	Beyer 30	103	Beyer 36
017	FolkSong	046	SoilPull	075	Beyer 40	104	Beyer 84
018	Girl Sea	047	Trout	076	Beyer 50	105	Beyer 88
019	LittStar	048	Send-off	077	Beyer 60	106	Beyer 32
020	KindeGtn	049	March	078	Beyer 70	107	Beyer 35
021	Wahaha	050	ForElise	079	Beyer 71	108	Beyer 11
022	Duck&Cik	051	SwaniRiv	080	Beyer 72	109	Beyer 16
023	Humorous	052	France	081	Beyer 75	110	Beyer 18
024	Joy Song	053	Danube	082	Beyer 76		
025	GoingHom	054	Hungary	083	Beyer 77		
026	Dove	055	Spaceman	084	Beyer 78		
027	Auldlang	056	Patriot	085	Beyer 79		
028	Moonligh	057	Cuckoo	086	Beyer 80		

Single finger chord list

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Multi-finger chord list


## **Information about used electrical and electronic equipment**

The main goal of European and national law regulations is to reduce the amount of waste produced from used electrical and electronic equipment, to ensure an appropriate level of collection, recovery and recycling of used equipment, and to increase public awareness of its harmfulness to the environment, at each stage of use of electrical and electronic equipment. Therefore, it should be pointed out that households play a key role in contributing to reuse and recovery, including recycling of used equipment. The user of electrical and electronic equipment – intended for households – is obliged to return it to authorized collector after its use. However, it should be remembered that products classified as electrical or electronic equipment should be disposed of at authorized collection points.