



LIGHT4ME VENOM ZOOM 250



CE   IP20 LED  0.2m  t_o 40°C t_i 150°C

INSTRUKCJA OBSŁUGI

USER MANUAL

1 SAFETY INSTRUCTIONS



CAUTION

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.



IMPORTANT

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device.

Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

The device shall only be used with rate voltage and frequency.

Make sure that the available voltage is not higher than stated at the end of this manual.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell or smell may arise. This is a normal process and does not necessary mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

Fixtures cannot be installed on combustible substances, keep more than 50cm distance with wall for smooth air flow, so there should be no shelter for fans and ventilation for heat radiation.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer of his service agent or a similar qualified person in order to avoid a hazard.



2

UNPACKING

Thank you for choosing our LED 250W moving head light. For your own safety, please read this manual before installing the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual well for future needs.

The LED 250W is made of a new type of high temperature strength of engineering plastic and cast aluminum casing with nice outlook. The fixture is designed and manufactured strictly following CE standards, complying with international standard DMX512 protocol. It's available independently controlled and linkable with each other for operation. And it is applicable for large-scale live performances, theater, studio, nightclubs and discos.

The 250W Moving head light which features high brightness and stability. Please carefully unpack it when you receive the fixture and check whether it is damaged during the transportation. And please check whether the following items are included inside the box:

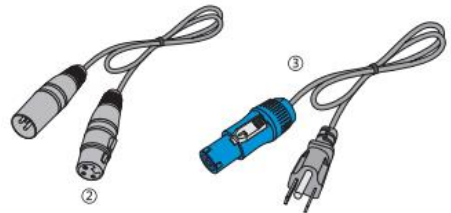

⑤

①	Moving Head	1PC
②	Signal Cable	1PC
③	Power Cable	1PC
④	Omega Clamp	1PC
⑤	User Manual	1PC

3 *FEATURES & SPECIFICATIONS*

Features

- 250W High Output White LED
- 50,000 hours lifespan and low power consumption
- Zoom angle 5.5°~30°, focus function
- High light output,13300LUX@5M at White light zoom in, 950LUX@5M at White light zoom out
- Temperature protect function, when the internal Temperature is up to 40° then the fans begin to work, when the internal temperature is up to 70°and the brightness reduce half.
- Color Wheel: 7 colors +white, color fine tuning, rotation with variable direction and speed
- 1 Rotation Gobo Wheel: 7 gobos + white, wheel rotation and shake
- 1 Static Gobo Wheel: 8 gobos + white, wheel rotation and shake
- Prism: 8-facet Prism, bi-directional rotatable at variable speeds
- Frost effect
- High speed strobe effect with 1-25 flashers per second
- Internal program available
- 16/18 DMX Channels USITT DMX-512
- DMX 512, master-slave and sound activated controllable or auto operation
- Colorful LCD display
- Efficient low noise fan cooling system
- PowerCon IN/OUT
- 3-pin & 5-pin XLR connectors IN/OUT
- Two 1/4 turn fastening Omega Clamps
- IP 20 protection rating

Specifications

Input Voltage: AC90-260V 50/60Hz

Light Source: 250W High Output White LED

Control Signal: DMX 512, master-slave and sound activated or auto operation

Control Channel: 16/18 DMX Channels USITT DMX-512


Power Consumption: 350W

Dimensions: 320(L)*220(W)*480(H)mm

Packing size: 365(L)*280(W)*600(H)mm

Net Weight: 13.50kg,Gross Weight: 16.50kg

4 PHOTOMETRIC DATA

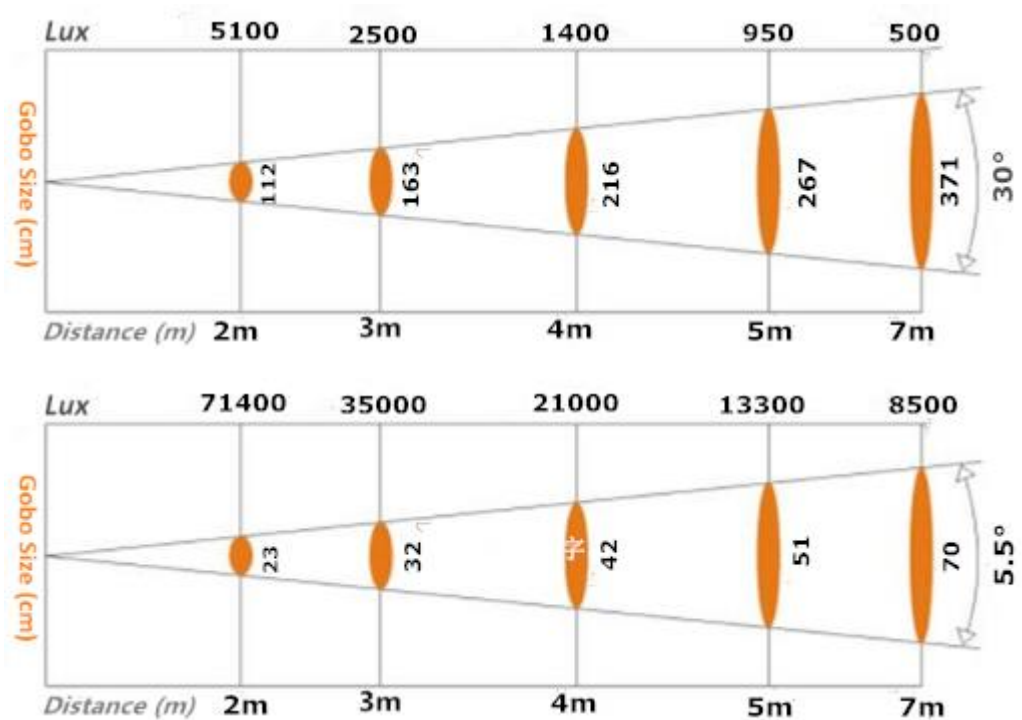

5 OPERATION INSTRUCTIONS

- The moving head is for spot effect for on-site decoration purpose.
- Don't turn on the fixture if it's been through severe temperature difference like after transportation because it might damage the light due to the environment changes. So make sure to operate the fixture until it is in normal temperature.
- This light should be keep away from strong shaking during any transportation or movement.

- Don't pull up the light by only the head, or it might cause damages to the mechanical parts.
- Don't expose the fixture in overheat, moisture or environment with too much dust when installing it. And don't lay any power cables on the floor. Or it might cause electronics shock to the people.
- Make sure the installation place is in good safety condition before installing the fixture.
- Make sure to put the safety chain and check whether the screws are screwed properly when installing the fixture.
- Make sure the lens are in good condition. It's recommended to replace the units if there are any damages or severe scratch.
- Make sure the fixture is operated by qualified personnel who know the fixture before using.
- Keep the original packages if any second shipments is needed.
- Don't try to change the fixtures without any instruction by the manufacturer or the appointed repairing agencies.
- It is not in warranty range if there are any malfunctions from not following the user manual to operate or any illegal operation, like shock short circuit, electronic shock, lamp broke, etc.

6 *INSTALLATIONS*

Cautions: For added protection mount the fixtures in areas outside walking paths, seating areas, or in areas where the fixture might be reached by unauthorized personnel.

Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 times the device's weight.

Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.

Never stand directly below the device when mounting, removing, or servicing the fixture.


From a ceiling, or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5ft) away from any flammable materials (decoration etc.).

Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Mounting points: Overhead mounting requires extensive experience, including amongst others calculating working load limits, a fine knowledge of the installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.


Clamp Mounting: The LED moving head provides a unique mounting bracket assembly that integrates the bottom of the base, and the safety cable rigging point in one unit (see the illustration below). When mounting this fixture to truss be sure to secure an appropriately rated clamp to the included omega bracket using a M10 screw fitted through the center hole of the "omega bracket". As an added safety measure be sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the base assembly.

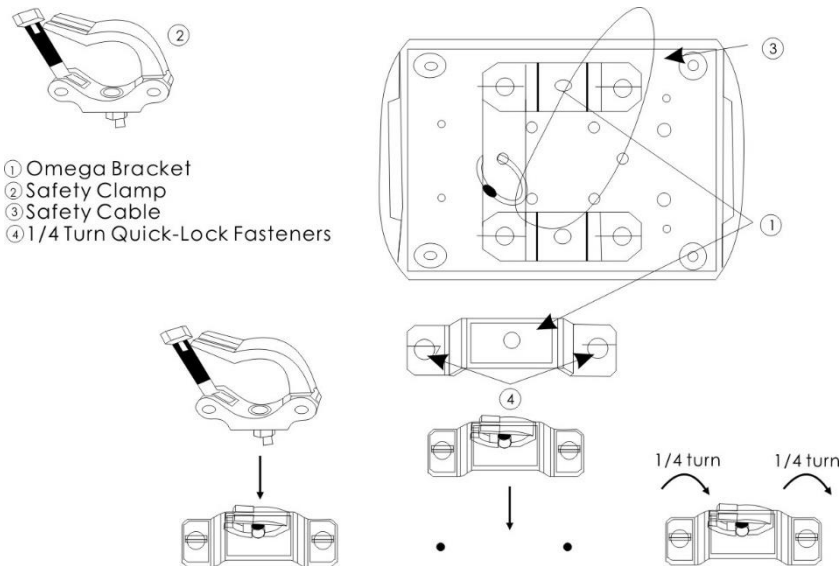


Regardless of the rigging option you choose for your LED moving head, always be sure to secure your fixture with a safety cable. The fixture provides a built-in rigging point for a safety cable on the hanging bracket as illustrated above. Be sure to only use the designated rigging point for the safety cable and never secure a safety cable to a carrying handle.

7 DMX-512 CONTROL CONNECTIONS

Connect the provided XLR cable to the female 3-pin XLR & 5-pin XLR output of your controller and the other side to the male 3-pin XLR & 5-pin XLR input of the moving head. You can chain multiple moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.

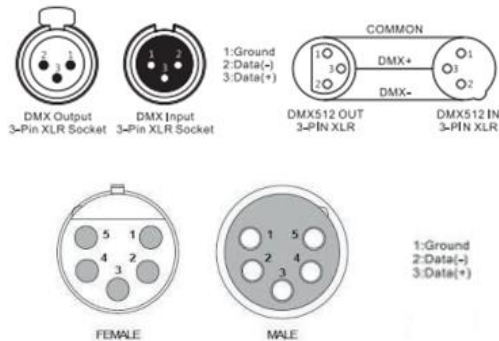


For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a $120\ \Omega$ resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

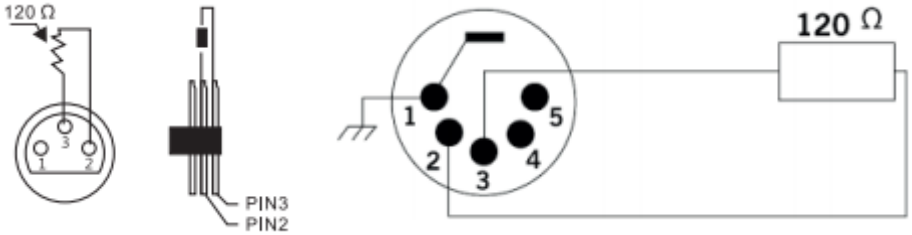

8

MENU OPERATIONS

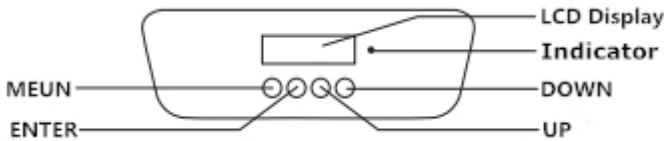

MENU

Address Set → [Set Address Numbers]

Run Mode

- [DMX]
- [AUTO] → Auto 1- Auto 2
- [SOUND]
- [MANUAL] → Manual Test → Function and Operation

Setup → [Advanced Setting]

- Pan reverse
- Tilt reverse
- Display
- Screen Reverse
- Channel (16/18CH Select)
- Sensitivity (01-100)
- Motor zero
- Reset
- Factory Set

System Information

- Ver V1
- DMX Address
- Temperature

9 DMX CHANNELS

18/16 channel mode sheet

18CH	16CH	Function	Channel Value	Description
CH1	CH1	Pan	0-255	0-540°
CH2		Pan fine	0-255	Pan Fine

CH3	CH2	Tilt	0-255	0-270°
CH4		Tilt Fine	0-255	Tilt Fine
CH5	CH3	X, Y speed	0-255	From fast to slow
CH6	CH4	LED Dimmer	0-255	From dark to bright
CH7	CH5	LED Strobe	0-7	Turn on
			8-250	Strobe from slow to fast
			251-255	Turn on
CH8	CH6	7 color + White	0-15	White Lighting
			16-31	Color 1
			32-47	Color 2
			48-63	Color 3
			64-79	Color 4
			80-95	Color 5
			96-111	Color 6
			112-127	Color 7
			128-191	CW from slow to fast
			192-255	CCW from slow to fast
CH9	CH7	Color effect	0-10	No function
			11-209	Color fine tuning
			210-255	Color shake from fast to slow
CH10		Static gobo wheel	0-6	open
			7-13	Gobo1
			14-20	Gobo2
			21-27	Gobo3
			28-34	Gobo4
			35-41	Gobo5
			42-48	Gobo6
			49-55	Gobo7

	CH8		56-63	Gobo 8
			64-70	Gobo 8 shake
			71-77	Gobo 7 shake
			78-84	Gobo 6 shake
			85-91	Gobo 5 shake
			92-98	Gobo 4 shake
			99-105	Gobo 3 shake
			106-112	Gobo 2 shake
			113-119	Gobo 1 shake
			120-127	open
			128-191	Gobo rotate CW from slow to fast
			192-255	Gobo rotate CCW from slow to fast
CH11	CH9	7 rotation gobos +White	0-15	open
			16-31	Gobo1
			32-47	Gobo2
			48-63	Gobo3
			64-79	Gobo4
			80-95	Gobo5
			96-111	Gobo6
			112-127	Gobo7
			128-191	Gobo Rotate CW from slow to fast
			192-255	Gobo Rotate CCW from slow to fast
CH12	CH10	Gobo Rotation	0-15	open
			16-95	Gobo Fine 0-250
			96-135	Gobo Rotating 0-90
			136-155	Gobo Rotating 0-250
			156-175	Gobo Rotating 0-360
			176-215	Gobo self-rotating CW from slow to fast

			216-255	Gobo self-rotating CCW rotating from slow to fast
CH13	CH11	Focus	0-255	Gobo hazy to clear
CH14	CH12	ZOOM	0-255	Angle from narrow to wider
CH15	CH13	Prism	0-63	Open
			64-255	Prism In
CH16	CH14	Prism Rotation	0-15	open
			16-95	Prism Fine 0-250
			96-135	Prism Rotating 0-90
			136-155	Prism Rotating 0-250
			156-175	Prism Rotating 0-360
			176-215	Prism self-rotating CW from slow to fast
CH17	CH15	Frost	0-4	No function
			5-127	Frost from shallow to deep
			128-191	Frost shake
			192-255	Frost effect
CH18	CH16	self-setting Program	0-7	No action
			8-131	Auto mode
			132-249	Soud mode
			250-253	Reset
			254-255	No action

10 MAINTENANCE AND CLEANING

The following points have to be considered during the inspection:

- 1) All screws for installing the devices or parts of the device have to be tightly connected and

must not be corroded.

- 2) There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION

Disconnect from mains before starting maintenance operation.



In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint-free cloth. Never use alcohol solvents.

There are no serviceable parts inside the device. Please refer to the instructions under “Installation instructions”.

Should you need any spare parts, please order genuine parts from your local dealer.

WARNING! THE DEVICE MUST NOT BE DISPOSED OF WITH HOUSEHOLD WASTE.



This symbol indicates that this product must not be disposed of with household waste, according to the EU and your national law. In order to prevent potential damage to the environment or health, the used product must be recycled. In accordance with current legislation, unusable electrical and electronic devices must be collected separately at the designated facilities for recycling, acting on the basis of applicable environmental standards.

Information about used electrical and electronic equipment

The main goal of European and national law regulations is to reduce the amount of waste produced from used electrical and electronic equipment, to ensure an appropriate level of collection, recovery and recycling of used equipment, and to increase public awareness of its harmfulness to the environment, at each stage of use of electrical and electronic equipment. Therefore, it should be pointed out that households play a key role in contributing to reuse and recovery, including recycling of used equipment. The user of electrical and electronic equipment – intended for households – is obliged to return it to authorized collector after its use. However, it should be remembered that products classified as electrical or electronic equipment should be disposed of at authorized collection points.

1. INSTRUKCJE BEZPIECZEŃSTWA

UWAGA

PROSIMY ZACHOWAĆ OSTROŻNOŚĆ PODCZAS PRACY. PRZY DOTYKANIU PRZEWODÓW MOŻNA DOZNAĆ PORAŻENIA PRĄDEM.

Urządzenie opuściło fabrykę w dobrym stanie. W celu utrzymania tego stanu, należy stosować się do ostrzeżeń i informacji zawartych w tej instrukcji.

WAŻNE

USZKODZENIA SPOWODOWANE ZIGNOROWANIEM INSTRUKCJI I UŻYTKOWANIEM PRODUKTU NIEZGODNIE Z PRZEZNACZENIEM POWODUJĄ UTRATĘ GWARANCJI. PRODUCENT NIE PONOSI ODPOWIEDZIALNOŚCI ZA SZKODY Z TYM ZWIĄZANE.

Jeśli urządzenie zostało narażone na zmiany temperatury, nie należy włączać go bezpośrednio po przeniesieniu do pomieszczenia. Nagromadzenie wilgoci może spowodować uszkodzenia produktu. Należy odczekać aż głowica osiągnie temperaturę pokojową.

Zasilanie urządzenia musi być uziemione, wszelkie połączenia elektryczne muszą być wykonane przez wykwalifikowaną osobę. Przed podłączeniem należy upewnić się, że napięcie jest zgodne z zalecanym.

Upewnij się, że przewód zasilający nie jest uszkodzony, w przeciwnym razie należy go wymienić na nowy.

Zawsze odłączaj głowicę z zasilania jeśli urządzenie nie jest używane lub jest czyszczone. Nigdy nie odłączaj z prądu ciągnąc za przewód.

Podczas pierwszego użycia może pojawić się odrobina dymu i zapachu spalin, jest to normalny efekt. Nie należy się tym przejmować, po kilku użyciach powinien ustąpić.

Nie należy generować projekcji na materiały palne.

Urządzenie nie może być umieszczane na materiałach palnych, takich jak dywany, kartony, itp. Należy zachować minimum 50cm odległości od ściany, aby zapewnić odpowiedni przepływ powietrza. Upewnij się również, że otwory wentylacyjne nie są zablokowane.

Jeśli zauważysz uszkodzenie obudowy lub przewodu zasilającego należy skontaktować się z serwisem, nie należy użytkować produktu.

2. WYPAKOWYWANIE

Dziękujemy za wybór naszej głowicy. Dla własnego bezpieczeństwa zapoznaj się z instrukcją przed użyciem. Zawiera ona ważne informacje na temat bezpieczeństwa instalacji i użytkowania. Instrukcję należy zachować dla przyszłych potrzeb.

Venom Zoom 250 został wykonany z wysokiej jakości nowoczesnego i odpornego za wysokie temperatury plastiku oraz aluminium. Urządzenie zostało zaprojektowane by spełniać standardy CE oraz współpracować z protokołem DMXX512. Urządzenia można używać pojedynczo lub w większej ilości. Oświetlenie to bardzo dobrze się sprawdza w wystąpieniach scenicznych, teatrach, studiach, klubach i dyskotekach.

Po otrzymaniu przesyłki prosimy o szczegółowe sprawdzenie zawartości, czy nie została uszkodzona i jest kompletna:

1. Głowica
2. Przewód DMX
3. Przewód zasilający PowerCon
4. Uchwyt montażowy
5. Instrukcja obsługi



3 CECHY I SPECYFIKACJA

CECHY

- 250W biała dioda LED
- 50 000 godzin żywotności diody i niskie zużycie energii
- Kąt świecenia 5,5°-30°, zmotoryzowany focus i zoom
- Wysoka wydajność świetlna, 13300LUX@5M przy białym świetle zoom in, 950lux@5M zoom out
- Funkcja ochrony przed przegrzaniem, kiedy temperatura osiąga 40°C wentylatory zaczynają pracować, przy temperaturze 70°C moc promienia zmniejsza się o połowę
- Koło kolorów: 7 kolorów +biały, rotacja w obydwu kierunkach o różnych prędkościach
- Koło statycznych: 8 gobo + open, gobo scroll, gobo shake
- Koło obrotowych gobo: 7 gobo + open, gobo scroll, gobo shake
- Pryzma: 8-ramienna obrotowa
- Stroboskop o dużej częstotliwości 1-25 błysków na sekundę
- Wbudowane programy
- 18/16 kanałów DMX
- Tryby pracy: auto, sound, master/slave, DMX512
- Kolorowy wyświetlacz LCD
- Cichy system chłodzenia
- POWERCON IN/OUT
- Uchwyty szybkiego montażu
- Stopień ochrony IP20

SPECYFIKACJA

Zasilanie: AC90-260V 50/60Hz

Źródło światła: 250W biała dioda LED

Tryby pracy: DMX 512, master/slave, sound, auto


Kanały DMX: 18/16 DMX

Zużycie energii: 350W

Wymiary: 320(długość)*220(szerokość)*480(wysokość)mm

Waga: 13.50kg, Waga brutto: 16.50kg

4 DANE FOTOMETRYCZNE

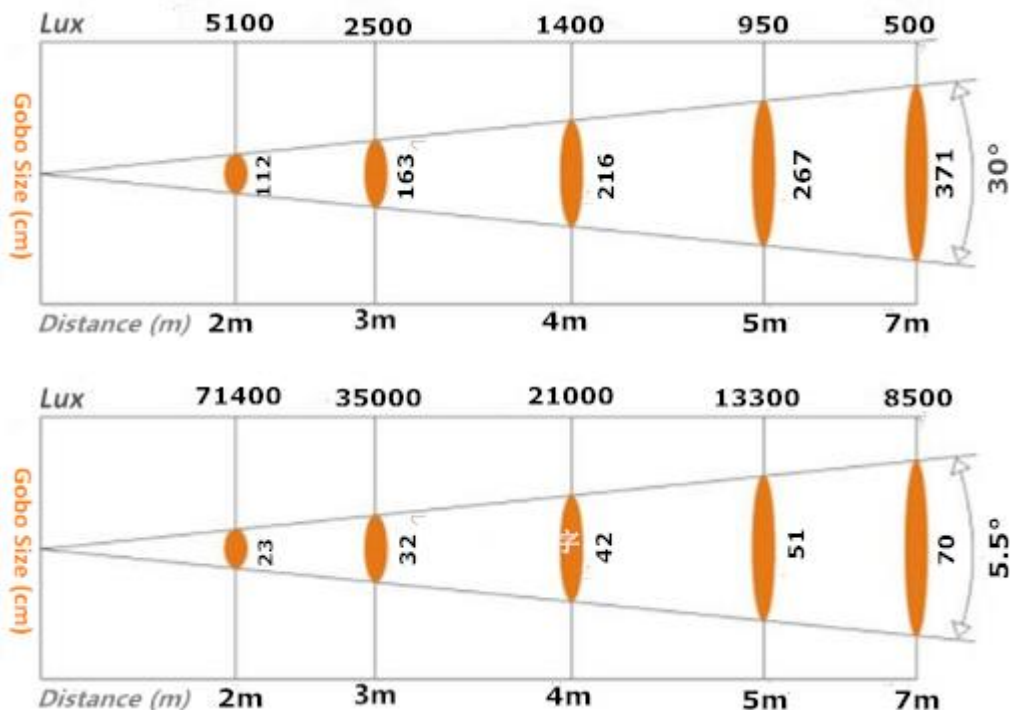

5 INSTRUKCJA UŻYTKOWANIA

- Ruchoma głowica do efektów typu spot w przemyśle dekoracyjnym i scenicznym, wyposażona dodatkowo w efekt zoom, dający możliwość regulacji wielkości plamy.
- Urządzenie nie powinno być narażone na silne wstrząsy podczas transport lub przenoszenia
- Nie podnoś głowicy chwytając za elementy ruchome, może to spowodować uszkodzenie części mechanicznych.
- Nie narażaj urządzenia na przegrzanie, wilgoć i duże zakurzenie otoczenia. Nie powinno się również kłaść przewodów zasilających na ziemi, aby uniknąć porażenia prądem
- Upewnij się, że miejsce instalacji spełnia wszelkie normy bezpieczeństwa.
- Stosuj linkę bezpieczeństwa i upewnij się, że wszystkie śruby zostały odpowiednio dokręcone.

- Utrzymuj soczewki w czystości i dobrym stanie, jeśli pojawią się jakieś uszkodzenia lub poważniejsze zadrapania, należy ją wymienić.
- Upewnij się, że urządzenie jest obsługiwane przez odpowiednio wykwalifikowany personel.
- Zachowaj oryginalne opakowanie w razie potrzeby transportu w przyszłości.
- Urządzenia nie należy modyfikować i dokonywać prób własnoręcznych napraw.

6 INSTALACJE

OSTRZEŻENIA: Aby zwiększyć bezpieczeństwo montażu, urządzenie należy instalować z dala od miejsc, w których przechodzą lub siedzą ludzie oraz miejsc, w których niepożądane osoby miałyby dostęp do oświetlenia.

Przed montażem upewnij się, że miejsce montażu może wytrzymać dziesięciokrotność wagi urządzenia.

Instalacja zawsze musi być zabezpieczona dodatkowym elementem, na przykład linką bezpieczeństwa.

Nigdy nie stój bezpośrednio pod głowicą podczas montażu, serwisowania lub demontażu urządzenia.





Upewnij się, że urządzenie znajduje się w odległości minimum 0,5m od materiałów palnych.

Podwieszanie głowic wymaga odpowiedniego doświadczenia, między innymi wiedzę na temat kalkulacji obciążeń, użytych materiałów. Powinien posiadać również wiedzę na temat czasowych inspekcji. Brak uprawnień i odpowiedniego doświadczenia podczas instalacji może spowodować uszkodzenia ciała, porażenie prądem lub kalectwo.

Montaż uchwytu: Venom Zoom 250 został wyposażony w unikatowy system mocujący (zobacz poniższą ilustrację), 2 uchwyty szybkiego montażu (Omega bracket) umieszczone od dołu bazy mocujemy do konstrukcji za pomocą haków. Upewnij się, że hak jest wyposażony w śrubę mocującą M10 i jest montowany na środku uchwytu Omega. Należy również zastosować linkę bezpieczeństwa w celu zwiększenia zabezpieczenia montażu.



- ① Omega Bracket
- ② Safety Clamp
- ③ Safety Cable
- ④ 1/4 Turn Quick-Lock Fasteners

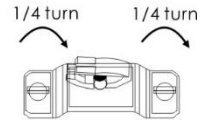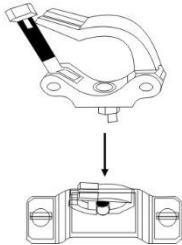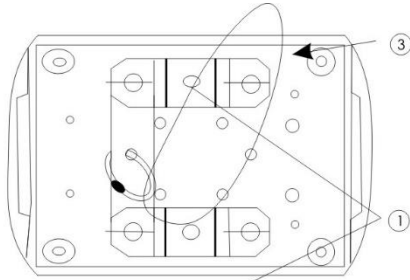

NIGDY NIE MOCUJ LINKI BEZPIECZEŃSTWA DO RĄCZEK TRANSPORTOWYCH LUB RUCHOMYCH ELEMENTÓW.

7 STRUKTURA MENU

MENU

Address Set → [ustawiony adres DMX]

Run Mode

- [DMX]
- [AUTO] → Auto 1- Auto 2
- [SOUND]
- [MANUAL] → Manual Test → Function and Operation

Setup → [Advanced Setting]

- Pan reverse
- Tilt reverse
- Display
- Screen Reverse
- Channel (16/18CH Select)
- Sensitivity (01-100)
- Motor zero
- Reset
- Factory Set

System Information

- Ver V1
- DMX Address
- Temperature

8 PROTOKÓŁ DMX512

18/16 rozpiska kanałów

18CH	16CH	Funkcja	Wartość	Opis
CH1	CH1	Pan	0-255	0-540°
CH2		Pan fine	0-255	Pan Fine
CH3	CH2	Tilt	0-255	0-270°
CH4		Tilt Fine	0-255	Tilt Fine
CH5	CH3	Szybkość ruchów	0-255	Szybko-wolno
CH6	CH4	Dimmer	0-255	0-100%
CH7	CH5	Stroboskop	0-7	Open
			8-250	Częstotliwość stroboskopu
			251-255	Open
CH8	CH6	7 kolorów + Białe	0-15	Open/Białe
			16-31	Czerwony
			32-47	Zielony
			48-63	Żółty
			64-79	Niebieski
			80-95	Magenta
			96-111	Pomarańczowy
			112-127	Cyjan
			128-191	Color Scroll
192-255	Odwrócony Color Scroll			
CH9	CH7	Efekt kolorów	0-10	Brak funkcji
			11-209	Color index
			210-255	Color shake
CH10			0-6	open
			7-13	Gobo1

CH8	Koło statycznych gobo	14-20	Gobo2	
		21-27	Gobo3	
		28-34	Gobo4	
		35-41	Gobo5	
		42-48	Gobo6	
		49-55	Gobo7	
		56-63	Gobo 8	
		64-70	Gobo 8 shake	
		71-77	Gobo 7 shake	
		78-84	Gobo 6 shake	
		85-91	Gobo 5 shake	
		92-98	Gobo 4 shake	
		99-105	Gobo 3 shake	
		106-112	Gobo 2 shake	
		113-119	Gobo 1 shake	
		120-127	open	
		128-191	Gobo scroll	
		192-255	Odwrócony gobo scroll	
		CH11	CH9	Koło rotacyjnych gobo
16-31	Gobo1			
32-47	Gobo2			
48-63	Gobo3			
64-79	Gobo4			
80-95	Gobo5			
96-111	Gobo6			
112-127	Gobo7			
128-191	Gobo scroll			
192-255	Odwrócony gobo scroll			

CH12	CH10	Rotacja gobo	0-15	open
			16-95	Gobo index
			96-135	Gobo Bounce 0-90
			136-155	Gobo Bounce 0-250
			156-175	Gobo Bounce 0-360
			176-215	Rotacja gobo
			216-255	Odwrócona rotacja gobo
CH13	CH11	Focus	0-255	
CH14	CH12	ZOOM	0-255	Wąski-szeroki
CH15	CH13	Pryzma	0-63	Open
			64-255	Włączenie pryzmy
CH16	CH14	Rotacja pryzmy	0-15	open
			16-95	Prism index
			96-135	Prism Bounce 0-90
			136-155	Prism Bounce 0-250
			156-175	Prism Bounce 0-360
			176-215	Rotacja
			216-255	Odwrócona rotacja
CH17	CH15	Frost	0-4	Brak funkcji
			5-127	Delikatny-głęboki
			128-191	Frost shake
			192-255	Frost
CH18	CH16	Funkcje specjalne	0-7	Brak funkcji
			8-131	Tryb Autoe
			132-249	Tryb Sound
			250-253	Reset
			254-255	Brak funkcji

9 KONSERWACJA I CZYSZCZENIE

Podczas sprawdzania stanu urządzenia należy wziąć pod uwagę następujące punkty:

- 1) Wszystkie śruby i elementy mocujące muszą być odpowiednio dokręcone i nie mogą być skorodowane.
- 2) Nie może być żadnych śladów deformacji obudowy, soczewek, elementów montażowych.
- 3) Wszystkie ruchome elementy mechaniczne nie mogą nosić śladów zużycia i muszą obrotować się z odpowiednim balansem.
- 4) Przewody zasilania elektrycznego nie mogą być uszkodzone, skręcone lub zdeformowane.

Wszelkie instalacje, naprawy, konserwacja muszą być wykonane przez wyspecjalizowany personel.

W celu przedłużenia żywotności głowicy i utrzymania maksymalnej wydajności urządzenie należy regularnie czyścić, wg poniższych instrukcji:

- 1) Czyścić zewnętrzną i wewnętrzną optykę co tydzień aby uniknąć zmniejszenie wydajności głowicy spowodowanej akumulacją kurzu.
- 2) Czyścić wentylator raz w tygodniu.
- 3) Należy dokonać szczegółowego testu elementów elektrycznych, polegających na sprawdzeniu stanu obwodów elektrycznych, wtyczek i styków, w celu uniknięcia przegrzania. Test powinien być wykonany przez wykwalifikowanego elektryka.

Rekomendujemy częste czyszczenie urządzenia za pomocą wilgotnej, niestrzępiącej ściereczki. Nie należy używać alkoholu, ani detergentów.

Wewnątrz nie znajdują się żadne element serwisowe. Nie należy rozkręcać urządzenia, bądź dokonywać własnoręcznych napraw.

UWAGA! URZĄDZENIA NIE WOLNO WYRZUCAĆ DO ODPADÓW DOMOWYCH.



To oznaczenie oznacza, że produkt nie może być wyrzucany razem z odpadami domowymi w całej UE. W celu zapobieżenia potencjalnym szkodom dla środowiska lub zdrowia, zużyty produkt należy poddać recyklingowi. Zgodnie z obowiązującym prawem, nie nadający się do użycia sprzęt elektryczny i elektroniczny należy zbierać osobno, w specjalnie do tego celu wyznaczonych punktach zbierania zużytego sprzętu, celem ich przetworzenia i ponownego wykorzystania na podstawie obowiązujących norm ochrony środowiska.

Informacja o zużyтым sprzęcie elektrycznym i elektronicznym

Głównym celem regulacji europejskich oraz krajowych jest ograniczenie ilości odpadów powstałych ze zużytego sprzętu elektrycznego i elektronicznego, zapewnienie odpowiedniego poziomu jego zbierania, odzysku i recyklingu oraz zwiększenie świadomości społecznej o jego szkodliwości dla środowiska naturalnego, na każdym etapie użytkowania sprzętu elektrycznego i elektronicznego. W związku z powyższym należy wskazać, iż gospodarstwa domowe spełniają kluczową rolę w przyczynianiu się do ponownego użycia i odzysku, w tym recyklingu zużytego sprzętu. Użytkownik sprzętu przeznaczonego dla gospodarstw domowych jest zobowiązany po jego zużyciu do oddania zbierającemu zużyty sprzęt elektryczny i elektroniczny. Należy jednak pamiętać, aby produkty należące do grupy sprzętu elektrycznego lub elektronicznego utylizowane były w uprawnionych do tego punktach zbiórki.