




Laser RGB 400mW Animation

User Manual

Instrukcja obsługi

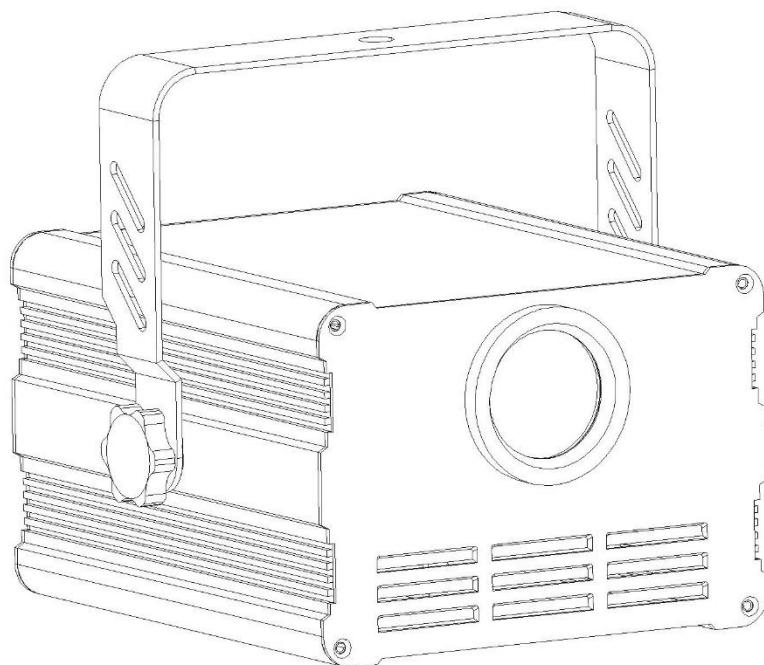

400mW

Please read this manual carefully before use!

Prosimy o szczegółowe zapoznanie się z instrukcją przed użyciem!

Contents

| | |
|---|-------------|
| Introduction----- | P2 |
| Silkscreen on product----- | P3 |
| Safety instruction/Installation/Technical specification----- | P4 |
| MENU----- | P5 |
| DMX512 Channel----- | P5-6 |
| DMX512 connection----- | P6 |
| DMX address setting/Ringing----- | P7 |
| Cleaning and maintenance/Warning----- | P8 |
| Warranty card----- | P9 |

Introduction

Thank you for purchasing this product. To optimize the performance of this product, prior to use, please read these operating instructions carefully to familiarize yourself with the basic operation of this unit. Please keep the manual in safe place for future reference.

This unit has been tested at our factory before being shipped to you, there is no assembly required.

Once after received this product , please take and put carefully. And check cautiously that whether the product was damaged or not during the transportation.

Checking Parts

Please check if the following parts are included:

- 1 x Laser light
- 1 x User manual
- 1 x Power cable

Caution

CAUTION!



Keep this device away from rain and moisture!



Unplug mains lead before opening the housing!



Warning!

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or

Symbol Instruction On The Device

 -----CE Certificate

 -----Only indoor use

 -----Environmental protection

 -----The minimum distance from lighted objects(meter)


$T_a = \text{---}^{\circ}\text{C}$ -----Max. Ambient Temp

$T_B = \text{---}^{\circ}\text{C}$ -----Max. Housing Temp

 -----Safety caution

 -----Careful burns

 -----Careful electric shock

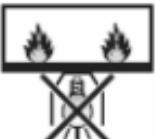 -----Not suitable for directly installed on the surface of ordinary combustible materials

Safety Instructions

- Please open and check whether break or not for transport once receive this fixture, if yes, not use it and contact dealer or manufacture as soon as possible.
- The Max applicable temperature for the light is 40°C. Do not use the light under or above the temperature. $ta=40^{\circ}\text{C}$
- The fixture is applicable for many occasions, it should keep clean, and avoid long use in overheating or dusty environment. To prevent the fixture from the chemical liquid .
- User must be careful of fire, heat, electric and fall-off that make heavy or fatal injury. Please read this user manual carefully before power on and installation, following safety and operation instruction in it. If still have any questions, please contact dealer or manufacture.
- User must following this user manual, do not open fixture by yourself, if any problems, please contact professional technician, maintenance should by technician.

Do not power on or start the fixture before installation, please stop after working more than 8 hours, which will longer use life.

- Fixed installation, do not by strong shocks.
- The minimum distance between light and the illuminated surface must be more than 1 meter. 
- Never look directly into the light source to avoid hurt to eyes (especially epileptics)!
When dustproof glass at light output breaks, cracks or other visible damage, user should replace with new glass to continue to use.

Installation

- When install this equipment please make sure there's no flammable surfaces (decorated things, etc) and minimum distance of 0.5M from the equipment to the flammable.
- The installation of the effect has to be built and constructed in a way that it can hold 10 times the weight and without any harming deformation.
- The installation must always be secured with a secondary safety attachment, e.g. an appropriate safety rope. Never stand directly below the device when mounting, removing or servicing the fixture.

Technical Specifications

Input voltage: AC100-240V, 50/60Hz

Fuse: BGDP \varnothing 5x20mm 250VAC F2A

Total power:15W

Light source: 400mW(R:200mW/650nm+G:50mW/520nm+B:150mW/450nm)

Control mode: Auto/Sound/DMX512/Master-slave

Channels: 13CH

Scanning system: 15Kpps Scanner, $\pm 30^{\circ}$

51 internal patterns for show

Surface temp: $T_b=45^{\circ}\text{C}$ (this data testing when the environment temp is 30°C)

Working temp: 10°C--65°C

Modulation: TTL

N.W: 2.39Kg

Product size: 188*193*173mm

Laser control system

1. MENU display

| MENU | Display | Function |
|------|---------|---------------------|
| Addr | 1-512 | DMX address setting |
| AUTO | 0-9 | Auto mode |
| SOUN | | Sound mode |

DMX Channel Instructions

| Channel | Function | Value | Details |
|---------|-----------------------|---------|---|
| CH1 | Control mode | 0-9 | No function |
| | | 10-99 | Auto mode |
| | | 100-149 | Sound mode |
| | | 150-199 | DMX mode |
| CH2 | Patterns option | 0-255 | Patterns option |
| CH3 | Gobos size | 0-63 | Gobos size option |
| | | 64-127 | Gobos speed option from small to large |
| | | 128-191 | Gobos speed option from larger to small |
| | | 192-255 | Zoom speed size option |
| CH4 | Centre move | 0-127 | Rotation angle option |
| | | 128-191 | Clockwise rotation speed option |
| | | 192-255 | Anti-clockwise rotation speed option |
| CH5 | Gobos Horizontal Move | 0-127 | Gobos Pan rotation position option |
| | | 128-255 | Gobos Pan rotation speed option |
| CH6 | Gobos Vertical Move | 0-127 | move with manual adjust |
| | | 128-255 | auto move top-down circularly |
| CH7 | Pan move | 0-127 | Pan position option |
| | | 128-255 | Pan move speed option |
| CH8 | Tilt move | 0-127 | Tilt position option |
| CH8 | Tilt move | 128-255 | Tilt move speed option |
| CH9 | Wave | 0-1 | No function |
| | | 2-127 | Wave phase option |
| | | 128-255 | Wave range and speed option |
| CH10 | Gobos drawing | 0-9 | no drawing |
| | | 10-63 | gradual drawing by manual adjust |
| | | 64-127 | auto gradual drawing (increasing) |

| | | | |
|------|------------------------|---------|---|
| | | 128-191 | auto gradual drawing (decreasing) |
| | | 192-255 | auto gradual drawing circularly |
| CH11 | Color control | 0-127 | Color fixed |
| | | 128-159 | Eotic color change without subsection |
| | | 160-191 | Eotic color change mode 1 with subsection |
| | | 192-223 | Eotic color change mode 2 with subsection |
| | | 224-225 | Eotic color change mode 3 with subsection |
| CH12 | Color change and speed | 0-9 | Color no change |
| | | 10-255 | Color change speed from slow to fast |
| CH13 | Display | 0-63 | Normal display |
| | | 64-127 | Brightness dot display |
| | | 128-255 | Dot display |

DMX-512 connection


DMX output



DMX Input




1: Ground
2: Signal (-)
3: Signal (+)

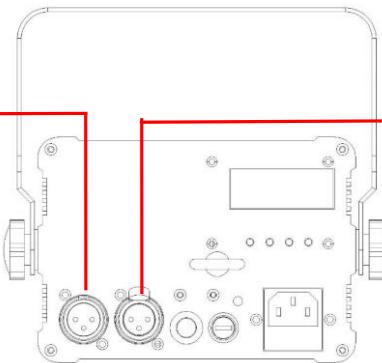


DMX In

First light (Address 001)

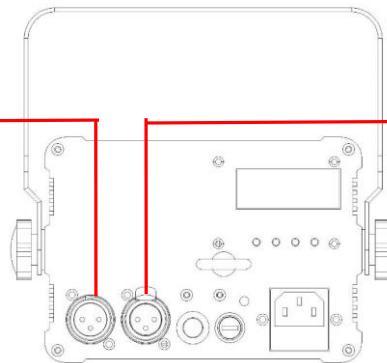

Second light (Address 014)

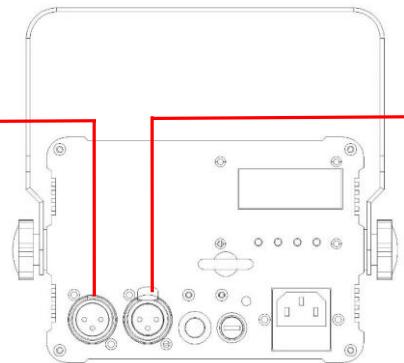

To the fourth

Third light(Address 017)

DMX Address setting

Each fixture must set a specific starting address. When receiving signal transmission, fixture will receive channel control signals which from the starting address.

According to different requirements or easy to use, the user can set many value fixtures to the same address, also can set up a separate address for every device.

If you set the same address, all the devices will receive from DMX channels signal. All


connecting fixtures are jointly controlled, controller can't separate control a device.

If you set a different address, each device will be separate from its particular set the starting address and begin accepting DMX512 control signal, so that more convenient separate control one device. Using this method must be based on channel quantity of device to determine a starting address.


This laser light has 13 channels.you should set the starting address of the first unit to 1, the second unit to 14(1 + 13), the third unit to 17 (13*2+ 1), and so on.

Ringing

1 Mounting bracket

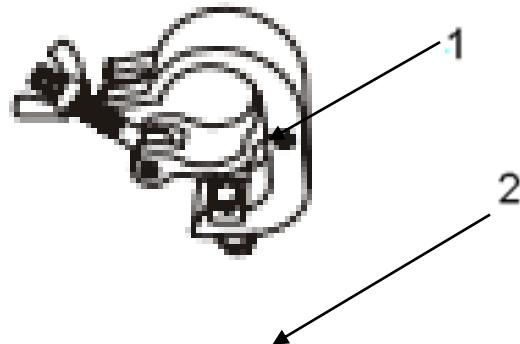

2 Handle

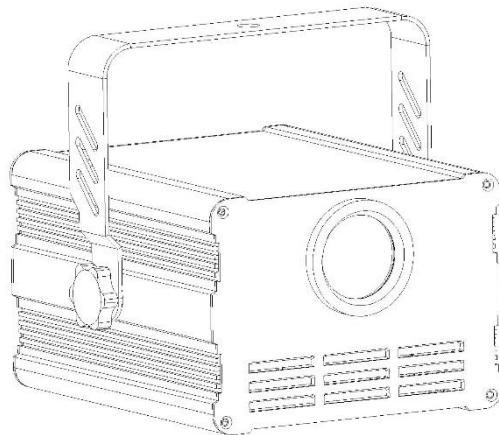

A).The ambient temperature range is 1°C--45°C, must never be exceeded.

B).The installation of the projector has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.

C)).When rigging or servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.

D) The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

E).The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

F). Sure M8 screws on mounting bracket fixed middle hole ¢12.5mm of handle

Cleaning and maintenance

Maintenance should be performed every 15-day period, by using a sponge which is dipped with alcohol, rather than wet cloth or other chemical liquid, to clean the mirror.

Always disconnect from the mains when the device is not in use or before cleaning it.

Caution



Make sure power off before cleaning and maintenance!

Warning



Warning!

Never look directly into the light source, as sensitive persons may suffer an epileptic shock(especially meant for epileptics)!



Warning!

Any power connected must by professional person

Information about used electrical and electronic equipment

WARNING! THE DEVICE MUST NOT BE DISPOSED OF WITH HOUSEHOLD WASTE.



This symbol indicates that this product must not be disposed of with household waste, according to the EU and your national law. In order to prevent potential damage to the environment or health, the used product must be recycled. In accordance with current legislation, unusable electrical and electronic devices must be collected separately at the designated facilities for recycling, acting on the basis of applicable environmental standards.

The main goal of European and national law regulations is to reduce the amount of waste produced from used electrical and electronic equipment, to ensure an appropriate level of collection, recovery and recycling of used equipment, and to increase public awareness of its harmfulness to the environment, at each stage of use of electrical and electronic equipment. Therefore, it should be pointed out that households play a key role in contributing to reuse and recovery, including recycling of used equipment. The user of electrical and electronic equipment – intended for households – is obliged to return it to authorized collector after its use. However, it should be remembered that products classified as electrical or electronic equipment should be disposed of at authorized collection points.

Spis treści

| | |
|--|------------|
| Wprowadzenie ----- | P10 |
| Zawartość zestawu ----- | P10 |
| Bezpieczeństwo/Instalacja/Specyfikacja techniczna ----- | P12 |
| MENU ----- | P13 |
| Kanały DMX 512 ----- | P13 |
| Połączenia DMX ----- | P14 |
| Ustawienie adresu DMX/ Podwieszanie----- | P15 |
| Czyszczenie i konserwacja/Ostrzeżenia ----- | P16 |

Wprowadzenie

Dziękujemy za wybór naszej głowicy. Dla własnego bezpieczeństwa zapoznaj się z instrukcją przed użyciem. Zawiera ona ważne informacje na temat bezpieczeństwa instalacji i użytkowania. Instrukcję należy zachować dla przyszłych potrzeb.

Laser został sprawdzony pod względem sprawności po ukończeniu produkcji, sprawdź czy nie uległ uszkodzeniom w transporcie. Urządzenie zostało zaprojektowane by spełniać standardy CE oraz współpracować z protokołem DMXX512. Urządzenia można używać pojedynczo lub w większej ilości. Oświetlenie to bardzo dobrze się sprawdza w wystąpieniach scenicznych.

Zawartość opakowania

Sprawdź czy w zestawie znajdują się następujące elementy:

1 x Laser

1 x Instrukcja obsługi

1 x Przewód zasilający

UWAGA!

UWAGA!



Trzymaj urządzenie z dala od deszczu i wilgoci!



Odlacz z zasilania przed czyszczeniem czy konserwacją!



Uwaga!

Uszkodzenia spowodowane przez nieprawidłowe użytkowanie nie podlegają gwarancji. Sprzedawca nie ponosi odpowiedzialności za szkody spowodane nie przestrzeganiem zasad zawartych w instrukcji.

Symbole na urządzeniu




Certyfikat CE



Tylko do użytku wewnętrznego



Ochrona środowiska

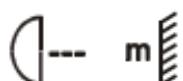

Minimalna odległość od przedmiotów (metry)

$T_a = \dots \text{ } ^\circ \text{C}$

Maksymalna temperatura otoczenia

$T_B = \dots \text{ } ^\circ \text{C}$

Maksymalna temperatura obudowy



Ostrzeżenie bezpieczeństwa



Uwaga! Może spowodować oparzenia



Uwaga! Może porazić prądem



Nie nadaje się do używania w bezpośrednim otoczeniu materiałów łatwopalnych

Instrukcje bezpieczeństwa

- Upewnij się, że urządzenie nie zostało uszkodzone podczas transportu.
- Nigdy nie patrz bezpośrednio w źródło światła, może to spowodować uszkodzenie wzroku.
- Urządzenie nie powinno być narażone na silne wstrząsy podczas transport lub przenoszenia
- Nie podnoś głowicy chwytając za elementy ruchome, może to spowodować uszkodzenie części mechanicznych.
- Nie narażaj urządzenia na przegrzanie, wilgoć i duże zakurzenie otoczenia. Nie powinno się również kłaść przewodów zasilających na ziemi, aby uniknąć porażenia prądem
- Upewnij się, że miejsce instalacji spełnia wszelkie normy bezpieczeństwa.
- Stosuj linkę bezpieczeństwa i upewnij się, że wszystkie śruby zostały odpowiednio dokręcone.
- Utrzymuj soczewki w czystości i dobrym stanie, jeśli pojawią się jakieś uszkodzenia lub poważniejsze zadrapania, należy ją wymienić.
- Upewnij się, że urządzenie jest obsługiwane przez odpowiednio wykwalifikowany personel.
- Zachowaj oryginalne opakowanie w razie potrzeby transportu w przyszłości.
- Urządzenia nie należy modyfikować i dokonywać prób własnoręcznych napraw.

Instalacja

- Podczas instalacji upewnij się, że w pobliżu nie ma żadnych materiałów łatwopalnych, a pozostałe obiekty znajdują się w odległości minimum 0,5m od urządzenia.
- Miejsce instalacji powinno być w stanie wytrzymać dziesięciokrotność wagi produktu bez widocznych deformacji.
- Instalacja musi być zabezpieczona za pomocą dodatkowej linki bezpieczeństwa.
- Nigdy nie stój bezpośrednio pod miejscem montażu.

Specyfikacja techniczna

Zasilanie: AC100-240V, 50/60Hz

Bezpiecznik: BGDP ⌀ 5x20mm 250VAC F2A

Zużycie energii: 15W

Źródło światła: 400mW(R:200mW/650nm+G:50mW/520nm+B:150mW/450nm)

Tryby pracy: Auto/Sound/DMX512/Master-slave

Kanały DMX: 13CH

System skanowania: 15Kpps Scanner, ±30°

51 wbudowanych wzorów

Temperatura obudowy: Tb=45°C (przy testach w temperaturze otoczenia 30°C)

Temperatura pracy: 10°C--65°C

Modulacja: TTL

Waga netto: 2.39Kg

Wymiary: 188*193*173mm

System kontroli Lasera

1. MENU

| MENU | Wyświetlacz | Funkcja |
|------|-------------|-----------------------|
| Addr | 1-512 | Ustawienie adresu DMX |
| AUTO | 0-9 | Tryb auto |
| SOUN | | Tryb sound |

Struktura DMX

| Kanał | Funkcja | Wartość | Opis |
|-------|-------------------------|---------|---|
| CH1 | Tryb pracy | 0-9 | Brak funkcji |
| | | 10-99 | Tryb Auto |
| | | 100-149 | Tryb Sound |
| | | 150-199 | Tryb DMX |
| CH2 | Wybór wzoru | 0-255 | Wybór wbudowanego wzoru |
| CH3 | Rozmiar gobo | 0-63 | Wybór rozmiaru gobo |
| | | 64-127 | Szybkość gobo rosnąco |
| | | 128-191 | Szybkość gobo malejąco |
| | | 192-255 | Regulacja szybkości zoom |
| CH4 | Ruchy centralne | 0-127 | Ustawienie kata |
| | | 128-191 | Rotacja zgodnie z ruchem wskazówek zegara |
| | | 192-255 | Rotacja odwrotna z ruchem wskazówek zegara |
| CH5 | Ruchy horyzontalne gobo | 0-127 | Pozycja rotacji |
| | | 128-255 | Szybkość rotacji |
| CH6 | Ruchy wertykalne gobo | 0-127 | Manualna kontrola |
| | | 128-255 | Ruchy automatyczne |
| CH7 | Pan | 0-127 | Pozycja |
| | | 128-255 | Szybkość |
| CH8 | Tilt | 0-127 | Pozycja |
| | | 128-255 | Szybkość |
| CH9 | Fala | 0-1 | Brak funkcji |
| | | 2-127 | Faza fali |
| | | 128-255 | Zakres i szybkość fali |
| CH10 | Rysowanie gobo | 0-9 | Brak rysowania |
| | | 10-63 | Ręczne stopniowe rysowanie |
| | | 64-127 | Automatyczne stopniowe rysowanie (rosnąco) |
| | | 128-191 | Automatyczne stopniowe rysowanie (malejąco) |
| | | 192-255 | Automatyczne stopniowe rysowanie cyrkulacyjne |
| CH11 | Kolory | 0-127 | Kolory stałe |
| | | 128-159 | Zmiana kolorów bez podsekcji |
| | | 160-191 | Tryb zmiany z podsekcjami 1 |

| | | | |
|------|-------------------------|---------|-----------------------------|
| | | 192-223 | Tryb zmiany z podsekcjami 2 |
| | | 224-225 | Tryb zmiany z podsekcjami 3 |
| CH12 | Szybkość zmiany kolorów | 0-9 | Brak zmiany |
| | | 10-255 | Wolno-szybko |
| CH13 | Wyświetlacz | 0-63 | Normalny |
| | | 64-127 | Jasność |
| | | 128-255 | Wyświetlacz kropkowy |

Połączenia DMX 512


DMX OUT



DMX IN




1. Uziemienie
2. Sygnał (-)
3. Sygnał (+)

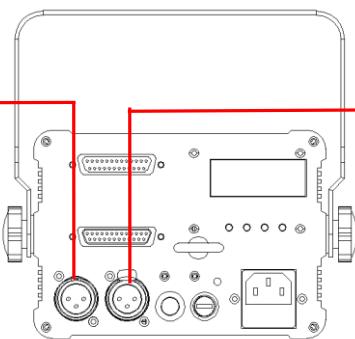


DMX In

Urządzenie 1. (Adres 001)

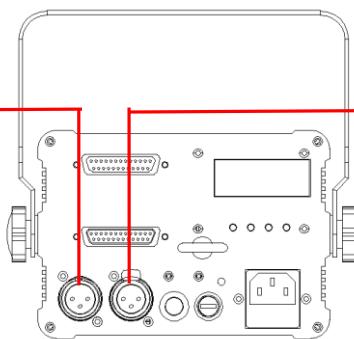

Urządzenie 2. (Adres 014)

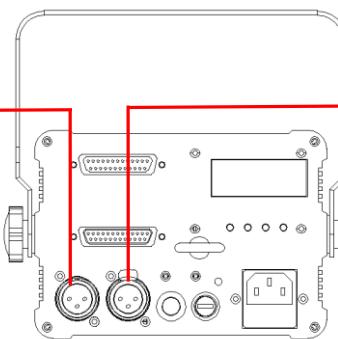

Urządzenie 3. (Adres 017)

Do urządzenia 4.

Ustawienie adresu DMX


Każde urządzenie powinno mieć indywidualny adres DMX. Gdy otrzymuje sygnał, protokół będzie sterował funkcjami zaczynając od adresu początkowego.

W zależności od potrzeb konfiguracji, lub wygody użytkowania, użytkownik może ustawić kilka urządzeń na ten sam adres. Wtedy urządzenia będą reagować jednakowo na polecenia wysypane przez sterownika. W tym przypadku nie ma możliwości kontroli pojedynczego urządzenia niezależnie.


Ten laser posiada 13 kanałów. W związku z tym przykładowo należy ustawić pierwsze urządzenie na adres DMX 001, kolejne na DMX 014 (13+1), trzecie urządzenie na adres DMX 027 (13*2+1), i tak dalej.

Podwieszanie

1 Klamra montażowa

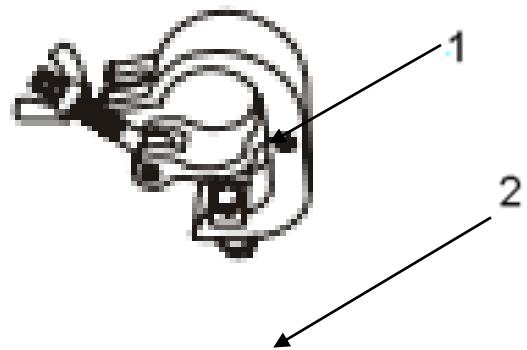

2 Uchwyt

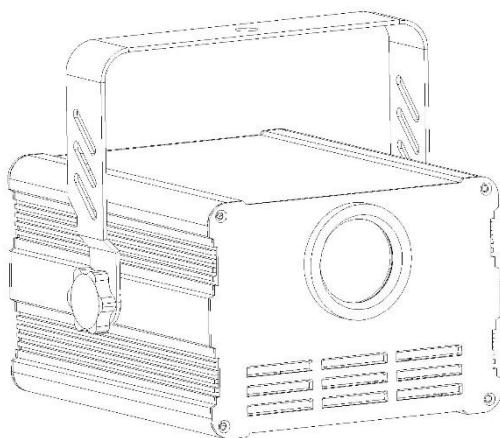

- A).Maksymalna temperatura otoczenia 1°C--45°C, nie może być przekroczona
- B).Miejsce instalacji powinno wytrzymać dziesięciokrotność wagi urządzenia przez 1 godzinę bez widocznych deformacji
- C). Zabrania się stawania pod miejscem montażu czy konserwacji
- D).Nadzorujący instalację powinien upewnić się, że całość została wykonana prawidłowo i urządzenie jest zabezpieczone linką bezpieczeństwa, przed rozpoczęciem pracy
- E).Instalacje stałe powinny być sprawdzone pod kątem bezpieczeństwa przynajmniej raz w roku

Czyszczenie i konserwacja

Czyszczenie powinno być przeprowadzone średnio dwa razy w miesiącu, za pomocą miękkiej ściernki lub gąbki zanurzonej w alkoholu, należy unikać mocnych detergentów i środków chemicznych. Przed czyszczeniem luster należy odłączyć urządzenie z zasilania.

Uwaga!



Upewnij się, że urządzenie jest wyłączone przed konserwacją

UWAGA

Uwaga!



Nigdy nie patrz bezpośrednio w źródło światła, może to uszkodzić wzrok i/lub wywołać wstrząs epiletyczny.

Uwaga!



Wszelkie połączenia zasilania powinny być wykonane przez profesjonalistę

Informacja o zużytym sprzęcie elektrycznym i elektronicznym

UWAGA! URZĄDZENIA NIE WOLNO WYRZUCAĆ DO ODPADÓW DOMOWYCH.



To oznaczenie oznacza, że produkt nie może być wyrzucany razem z odpadami domowymi w całej UE. W celu zapobiegnięcia potencjalnym szkodom dla środowiska lub zdrowia, zużyty produkt należy poddać recyklingowi.

— Zgodnie z obowiązującym prawem, nie nadający się do użycia sprzęt elektryczny i elektroniczny należy zbierać osobno, w specjalnie do tego celu wyznaczonych punktach zbierania zużytego sprzętu, celem ich przetworzenia i ponownego wykorzystania na podstawie obowiązujących norm ochrony środowiska.

Główne cele regulacji europejskich oraz krajowych jest ograniczenie ilości odpadów powstały ze zużytego sprzętu elektrycznego i elektronicznego, zapewnienie odpowiedniego poziomu jego zbierania, odzysku i recyklingu oraz zwiększenie świadomości społecznej o jego szkodliwości dla środowiska naturalnego, na każdym etapie użytkowania sprzętu elektrycznego i elektronicznego. W związku z powyższym należy wskazać, iż gospodarstwa domowe spełniają kluczową rolę w przyczynianiu się do ponownego użycia i odzysku, w tym recyklingu zużytego sprzętu. Użytkownik sprzętu przeznaczonego dla gospodarstw domowych jest zobowiązany po jego zużyciu do oddania zbierającemu zużyty sprzęt elektryczny i elektroniczny. Należy jednak pamiętać, aby produkty należące do grupy sprzętu elektrycznego lub elektronicznego utylizowane były w uprawnionych do tego punktach zbiórki.